


AUDI - 80, 90 QUATTRO INC AVANT (1992-1996), S2 INC AVANT B4, RS2 B4 (1994-1996)

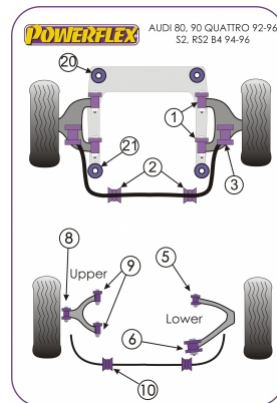

## Notes

- **PFF 3101 Fit 37mm Pressed Arms**
- PFF 3102 Fit 45mm Cast Arms
- PFR 3101121 & 23.5 Front anti roll bar mounts are tear drop shaped.
- PFF 310621.5 Fits models where there is no link rod between the anti roll bar and control arm.
- PFF 312010 & PFF 312110 fit vehicles with 10mm mounting bolts, vehicles with 12mm bolts use PFF 312012 & PFF 312112
- PFR 3209 Fits pressed rear upper arms
- **PFR 3212 Fits cast rear upper arms**


## PRODUCT PRICING INFORMATION



The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

**Bush Price x Qty Per Car = Pack Price**

In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.

Bush description	Quantity Per Car	Diagram Reference	Part Number	Retail Price Each
 <b>Front Wishbone Bush</b> <a href="#">Click for fitting instructions</a>	4	1	<b>PFF 3101</b>	

	<b>Front Wishbone Bush</b> Click for fitting instructions	4	1	<b>PFF 3102</b>
	<b>Front Anti Roll Bar Mount 24mm</b>	2	2	<b>PFF 310324</b>
	<b>Front Anti Roll Bar Mount 26mm</b>	2	2	<b>PFF 310326</b>
	<b>Front Anti Roll Bar Mount 27mm</b>	2	2	<b>PFF 310327</b>
	<b>Front Anti Roll Bar Mount 21mm</b>	2	2	<b>PFR 3101121</b>
	<b>Front Anti Roll Bar Mount 23.5mm</b>	2	2	<b>PFR 3101123.5</b>
	<b>Front Anti Roll Bar To Control Arm Bush</b>	2	3	<b>PFF 310621.5</b>
	<b>Rear Lower Arm Front Bush</b>	2	5	<b>PFR 3205</b>
	<b>Rear Lower Arm Rear Bush</b>	2	6	<b>PFR 3206</b>
	<b>Rear Upper Arm Outer Bush</b>	2	8	<b>PFR 3208</b>
	<b>Rear Upper Arm Inner Bush</b>	4	9	<b>PFR 3209</b>
	<b>REAR UPPER ARM INNER BUSH (CAST ARM)</b> Click for fitting instructions	4	9	<b>PFR 3212</b>
	<b>PowerAlign Camber Bolt Kit (14mm)</b> Click for fitting instructions	1		<b>PFA 10014</b>
	<b>Rear Anti Roll Bar Mount 12mm</b>	2	10	<b>PFR 351112</b>
	<b>Rear Anti Roll Bar Mount 15mm</b>	2	10	<b>PFR 351115</b>
	<b>Rear Anti Roll Bar Mount 16mm</b>	2	10	<b>PFR 351116</b>
	<b>Front Subframe Front Bush 10mm</b>	2	20	<b>PFF 312010</b>
	<b>Front Subframe Front Bush 12mm</b>	2	20	<b>PFF 312012</b>
	<b>Front Subframe Rear Bush 10mm</b>	2	21	<b>PFF 312110</b>
	<b>Front Subframe Rear Bush 12mm</b>	2	21	<b>PFF 312112</b>