


AUDI - 80, 90 QUATTRO INC AVANT (1983-1992) S2 COUPE B3 (1991-1996)

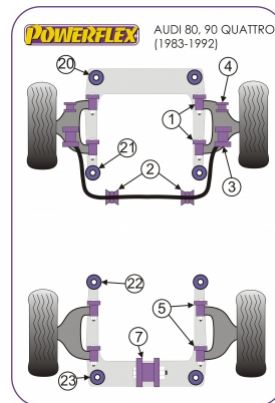

Notes

- PFF 3101 Fits 37mm Pressed Front Arms
- PFF 3102 Fits 45mm Cast Front Arms
- PFF 3104 & PFF 3105 Only Fit Up To 1992 Chassis Number 8A-N-200-000
- PFF 310621.5 Fits models where there is no link rod between the anti roll bar and control arm.
- PFR 3101121/23.5/25 Front anti roll bar mounts are tear drop shaped
- PFF 312010 & PFF 312110 fit vehicles with 10mm mounting bolts, vehicles with 12mm bolts use PFF 312012 & PFF 312112


PRODUCT PRICING INFORMATION





















The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

Bush Price x Qty Per Car = Pack Price

In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.

Bush description	Quantity Per Car	Diagram Reference	Part Number	Retail Price Each
 Front Wishbone Bush Click for fitting instructions	4	1	PFF 3101	

	Front Wishbone Bush Click for fitting instructions	4	1	PFF 3102
	Front Anti Roll Bar Mount 24mm	2	2	PFF 310324
	Front Anti Roll Bar Mount 25mm	2	2	PFF 310325
	Front Anti Roll Bar Mount 21mm	2	2	PFR 3101121
	Front Anti Roll Bar Mount 23.5mm	2	2	PFR 3101123.5
	Front Anti Roll Bar Mount 25mm	2	2	PFR 3101125
	Front Outer Roll Bar Mount Lower 16mm	2	3	PFF 3105
	Front Outer Roll Bar Mount Lower 12mm	2	3	PFF 310512
	Front Anti Roll Bar To Control Arm Bush	2	3	PFF 310621.5
	Front Outer Roll Bar Mount Upper	2	4	PFF 3104
	Rear Wishbone Bush Click for fitting instructions	4	5	PFF 3101
	Rear Differential Mount	1	7	PFR 3107
	Front Subframe Front Bush 10mm	2	20	PFF 312010
	Front Subframe Front Bush 12mm	2	20	PFF 312012
	Front Subframe Rear Bush 10mm	2	21	PFF 312110
	Front Subframe Rear Bush 12mm	2	21	PFF 312112
	Rear Subframe Front Bush 10mm	2	22	PFF 312110
	Rear Subframe Front Bush 12mm	2	22	PFF 312112
	Rear Subframe Rear Bush 10mm	2	23	PFF 312010
	Rear Subframe Rear Bush 12mm	2	23	PFF 312012