


## AUDI - A6 / S6 / RS6 (C5) 1997 - 2005 - A6 AVANT (1998 - 2001)

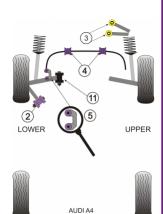



## PRODUCT PRICING INFORMATION

The prices shown on our website are <u>per bush</u>.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

## Bush Price x Qty Per Car = Pack Price

In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.

	Quantity	Diagram	Part	Retail Price
Bush description	Per Car	Reference	Number	Each
Front Tie Bar Rear Bush	2	2	PFF 3202	
Front Upper Arm To Chassis Bush	4	3	PFF 3203	
Front Anti Roll Bar Bush 25mm	2	4	PFF 320425	
 Front Anti Roll Bar Bush 27mm	2	4	PFF 320427	
Front Anti Roll Bar Bush 29mm	2	4	PFF 320429	

<b>=</b>	Front Anti Roll Bar Link Bush Click for fitting instructions	4	5	PFF 3213
	Front Lower Arm Inner Bush Click for fitting instructions	2	11	PFF 3211
	Bump Stop Kit Click for fitting instructions	1		BS 2007K