


## BMW - E30 3 SERIES (1982 - 1991)

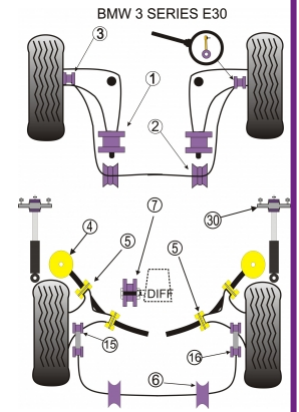

### Notes

- Please check front and rear roll bar size before ordering
- PFF 5303 is an eccentric bush for the M3. This can be fitted to all models through out the range giving them increased castor to match the M3 setup.
- PFF 5304 is designed to fit models where the Anti Roll Bar joins lower arm not the shock absorber.
- For the rear trailing arm use either PFR 5306 or on-car adjustable bushes PFR 5306G



### PRODUCT PRICING INFORMATION























The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

**Bush Price x Qty Per Car = Pack Price**

In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.

Bush description	Quantity Per Car	Diagram Reference	Part Number	Retail Price Each
 <b>Front Lower Wishbone Rear Bush</b> <a href="#">Click for fitting instructions</a>	2	1	<b>PFF 5301</b>	
 <b>Front Lower Wishbone Rear Bush Eccentric</b> <a href="#">Click for fitting instructions</a>	2	1	<b>PFF 5303</b>	

	<b>Front Anti Roll Bar Bush 19mm</b>	<b>2</b>	<b>2</b>	<b>PFF 530219</b>
	<b>Front Anti Roll Bar Bush 20mm</b>	<b>2</b>	<b>2</b>	<b>PFF 530220</b>
	<b>Front Anti Roll Bar Bush 21mm</b>	<b>2</b>	<b>2</b>	<b>PFF 530221</b>
	<b>Front Anti Roll Bar Bush 22mm</b>	<b>2</b>	<b>2</b>	<b>PFF 530222</b>
	<b>Front Anti Roll Bar Bush 24mm</b>	<b>2</b>	<b>2</b>	<b>PFF 530224</b>
	<b>Anti Roll Bar Link Rod Bush</b>	<b>2</b>	<b>3</b>	<b>PFF 5304</b>
	<b>Rear Beam Mounting Bush</b>	<b>2</b>	<b>4</b>	<b>PFR 5305</b>
	<b>Rear Trailing Arm Bush</b>	<b>4</b>	<b>5</b>	<b>PFR 5306</b>
	<b>Rear Trailing Arm Bush Adjustable</b>  Click for fitting instructions	<b>4</b>	<b>5</b>	<b>PFR 5306G</b>
	<b>Rear Roll Bar Mounting Bush 12mm</b>	<b>2</b>	<b>6</b>	<b>PFR 530812</b>
	<b>Rear Roll Bar Mounting Bush 14mm</b>	<b>2</b>	<b>6</b>	<b>PFR 530814</b>
	<b>Rear Roll Bar Mounting Bush 15.5mm</b>	<b>2</b>	<b>6</b>	<b>PFR 530815.5</b>
	<b>Rear Roll Bar Mounting Bush 16mm</b>	<b>2</b>	<b>6</b>	<b>PFR 530816</b>
	<b>Rear Roll Bar Mounting Bush 18mm</b>	<b>2</b>	<b>6</b>	<b>PFR 530818</b>
	<b>Rear Diff Mounting Bush</b>	<b>1</b>	<b>7</b>	<b>PFR 5300</b>
	<b>Rear Anti Roll Bar Link To Arm Bush</b>  Click for fitting instructions	<b>2</b>	<b>15</b>	<b>PFR 5315</b>
	<b>Rear Anti Roll Bar Link To Anti Roll Bar Bush</b>  Click for fitting instructions	<b>2</b>	<b>16</b>	<b>PFR 5316</b>
	<b>Bump Stop Kit</b>  Click for fitting instructions	<b>1</b>		<b>BS 2003K</b>