


BMW - E46 3 SERIES (1999 - 2006) - E46 3 SERIES XI/XD

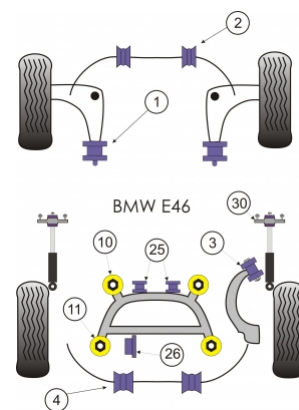

Notes

- PFR 5563010 fits cars with standard or aftermarket rear shock absorber with a 10mm pin, PFR 55630-12 fits cars with aftermarket rear shock absorbers with a 12mm pin. Neither fit Cabriolet models




PRODUCT PRICING INFORMATION

















The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

Bush Price x Qty Per Car = Pack Price

In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.

Bush description	Quantity Per Car	Diagram Reference	Part Number	Retail Price Each
 Front Wishbone Rear Bush Click for fitting instructions	2	1	PFF 54601XI	
 Front Anti Roll Bar Bush 21.5mm	2	2	PFF 5460221	
 Front Anti Roll Bar Bush 23mm	2	2	PFF 5460223	

	Front Anti Roll Bar Bush 23.5mm	2	2	PFF 5460223.5
	Front Anti Roll Bar Bush 24mm	2	2	PFF 5460224
	Front Anti Roll Bar Bush 26mm	2	2	PFF 5460226
	Front Anti Roll Bar Mounting Bush 27mm	2	2	PFF 5460227
	Front Anti Roll Bar Bush 30.8mm	2	2	PFF 5460230.8
	Rear Trailing Arm Bush	2	3	PFR 53608
	Rear Roll Bar Mounting Bush 15mm	2	4	PFR 550415
	Rear Roll Bar Mounting Bush 18mm	2	4	PFR 550418
	Rear Roll Bar Mounting Bush 19mm	2	4	PFR 550419
	Rear Roll Bar Mounting Bush 21.5mm	2	4	PFR 5504215
	Rear Roll Bar Mounting Bush 22.5mm	2	4	PFR 550422.5
	Rear Subframe Front Bush 🔧 Click for fitting instructions	2	10	PFR 54610
	Rear Subframe Rear Bush 🔧 Click for fitting instructions	2	11	PFR 54611
	Rear Diff Front Bush 🔧 Click for fitting instructions	2	25	PFR 54625
	Rear Diff Rear Bush 🔧 Click for fitting instructions	1	26	PFR 54626
	Rear Shock Top Mount Bracket and Bush 10mm 🔧 Click for fitting instructions	2	30	PFR 5563010
	Rear Shock Top Mount Bracket and Bush 12mm 🔧 Click for fitting instructions	2	30	PFR 5563012