


## BMW - E53 X5 (1999-2006)

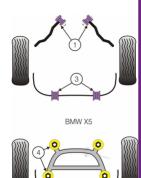



## PRODUCT PRICING INFORMATION

The prices shown on our website are <u>per bush</u>.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

## Bush Price x Qty Per Car = Pack Price

In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.

	Bush description	Quantity Per Car	Diagram Reference	Part Number	
	Front Lower Radius Arm To Chassis Click for fitting instructions	2	1	PFF 5901	
0	Front Anti Roll Bar To Chassis 29mm	2	3	PFF 590529	
	Rear Subframe To Chassis Bush Click for fitting instructions	4	4	PFR 5908	
30	Rear Anti Roll Bar Mounting Bush 22mm	2	5	PFR 5460922	
	Rear Anti Roll Bar Mounting Bush 23.5mm	2	5	PFR 5460923.5	
	PowerAlign Camber Bolt Kit (16mm)  Click for fitting instructions	1		PFA 10016	
Sopreth					

