


BMW - E60, E61 5 SERIES (2003-2010) - E60 5 SERIES, SALOON

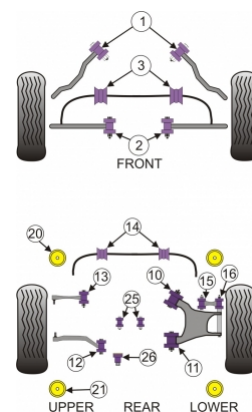

Notes:

- Not for M5 or X (4 wheel drive) models
- Use either PFR 5720 complete bush or PFR 5723 inserts
- Use either PFR 5722 complete bush or PFR 5721 inserts




PRODUCT PRICING INFORMATION

The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

Bush Price x Qty Per Car = Pack Price

In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.

Bush description	Quantity Per Car	Diagram Reference	Part Number	Retail Price Each
 Front Radius Arm To Chassis Bush Click for fitting instructions	2	1	PFF 5701	
 Front Control Arm To Chassis Bush Click for fitting instructions	2	2	PFF 51002	
 Front Anti Roll Bar Mount 24.6mm	2	3	PFF 570324.6	

	Front Anti Roll Bar Mount 25mm	2	3	PFF 570325
	Front Anti Roll Bar Mount 25.6mm	2	3	PFF 570325.6
	Rear Lower Arm Front Bush	2	10	PFR 5710
	Rear Lower Arm Rear Bush	2	11	PFR 5711
	Rear Upper Arm Inner Bush 🔗 Click for fitting instructions	2	12	PFR 5712
	Rear Toe Adjust Inner Bush	2	13	PFR 5713
	Rear Anti Roll Bar Mount 13.5mm	2	14	PFR 5460913.5
	Rear Anti Roll Bar Mount 14mm	2	14	PFR 5460914
	Rear Anti Roll Bar Mount 14.5mm	2	14	PFR 5460914.5
	Rear Anti Roll Bar Mount 16mm	2	14	PFR 5460916
	Rear Anti Roll Bar Mount 18mm	2	14	PFR 5460918
	Rear Outer Integral Link Upper Bush 🔗 Click for fitting instructions	2	15	PFR 5715
	Rear Outer Integral Link Lower Bush 🔗 Click for fitting instructions	2	16	PFR 5716
	Rear Subframe Front Mounting Bush 🔗 Click for fitting instructions	2	20	PFR 5720
	Rear Subframe Front Mounting Insert 🔗 Click for fitting instructions	2	20	PFR 5723
	Rear Subframe Rear Mounting Bush 🔗 Click for fitting instructions	2	21	PFR 5722
	Rear Subframe Rear Mounting Insert 🔗 Click for fitting instructions	2	21	PFR 5721
	Rear Diff Front Mounting Bush 🔗 Click for fitting instructions	2	25	PFR 5725
	Rear Diff Rear Mounting Bush 🔗 Click for fitting instructions	1	26	PFR 5726