


## BMW - E70 X5 (2006-2013)

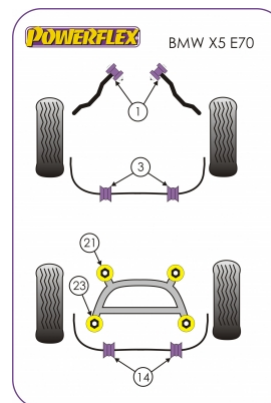

### Notes

- PFR 51423 does not fit the X5 M model
- PFF 51403 & PFR 51413 fit models with conventional Anti Roll Bars.
- PFF 51404 & PFR 51414 fit models with Active Anti Roll Bars as found on Dynamic Handling specification vehicles only.




### PRODUCT PRICING INFORMATION







The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

**Bush Price x Qty Per Car = Pack Price**

In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.

Bush description	Quantity Per Car	Diagram Reference	Part Number	Retail Price Each
 <b>PowerAlign Camber Bolt Kit (14mm)</b> <a href="#">Click for fitting instructions</a>	1		<b>PFA 10014</b>	
 <b>Front Radius Arm To Chassis Bush</b> <a href="#">Click for fitting instructions</a>	2	1	<b>PFF 51401</b>	
 <b>Front Anti Roll Bar Mounting Bush 27mm</b>	2	3	<b>PFF 5140327</b>	

	<b>Front Anti Roll Bar Mounting Bush</b>	<b>2</b>	<b>3</b>	<b>PFF 51404</b>
	<b>Rear Anti Roll Bar Mounting Bush 22mm</b>	<b>2</b>	<b>13</b>	<b>PFR 5141322</b>
	<b>Rear Anti Roll Bar Mounting Bush 24mm</b>	<b>2</b>	<b>13</b>	<b>PFR 5141324</b>
	<b>Rear Anti Roll Bar Mounting Bush</b>	<b>2</b>	<b>14</b>	<b>PFR 51414</b>
	<b>Rear Subframe Front Bush Insert</b>	<b>2</b>	<b>21</b>	<b>PFR 51421</b>
	<b>Rear Subframe Rear Bush Insert</b>	<b>2</b>	<b>23</b>	<b>PFR 51423</b>