


## BMW - E83 X3 (2003-2010)

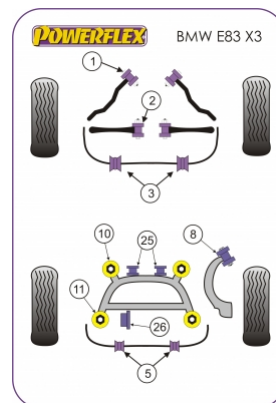

### Notes

- PFR 54610 & 4611 are complete replacement bushes, for inserts use PFR 54613 & 4614 (inserts fit into the voiding of the original bush)




### PRODUCT PRICING INFORMATION

The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

**Bush Price x Qty Per Car = Pack Price**

In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.

Bush description	Quantity Per Car	Diagram Reference	Part Number
 <b>Front Lower Radius Arm To Chassis Bush</b> <a href="#">Click for fitting instructions</a>	2	1	<b>PFF 5901</b>
 <b>Front Control Arm To Chassis Bush</b>	2	2	<b>PFF 51502</b>
 <b>Front Anti Roll Bar Mounting Bush 22.5mm</b>	2	3	<b>PFF 5150322.5</b>

	<b>Front Anti Roll Bar Mounting Bush 23.5mm</b>	<b>2</b>	<b>3</b>	<b>PFF 5150323.5</b>
	<b>Rear Anti Roll Bar Mounting Bush 17.5mm</b>	<b>2</b>	<b>5</b>	<b>PFR 5460917.5</b>
	<b>Rear Anti Roll Bar Mounting Bush 18.5mm</b>	<b>2</b>	<b>5</b>	<b>PFR 5460918.5</b>
	<b>Rear Trailing Arm Front Bush</b>	<b>2</b>	<b>8</b>	<b>PFR 53608</b>
	<b>Rear Subframe Front Bush</b>  Click for fitting instructions	<b>2</b>	<b>10</b>	<b>PFR 54610</b>
	<b>Rear Subframe Front Bush Insert</b>	<b>2</b>	<b>10</b>	<b>PFR 54614</b>
	<b>Rear Subframe Rear Bush</b>  Click for fitting instructions	<b>2</b>	<b>11</b>	<b>PFR 54611</b>
	<b>Rear Subframe Rear Bush Insert</b>	<b>2</b>	<b>11</b>	<b>PFR 54613</b>
	<b>Rear Diff Front Bush</b>  Click for fitting instructions	<b>2</b>	<b>25</b>	<b>PFR 54625</b>
	<b>Rear Diff Rear Bush</b>  Click for fitting instructions	<b>1</b>	<b>26</b>	<b>PFR 54626</b>