


BMW - MINI GENERATION 1

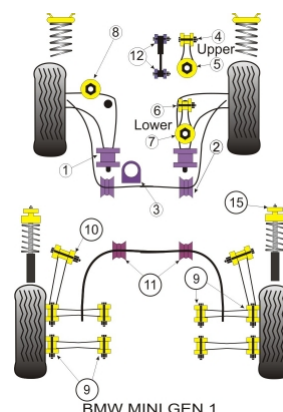

Chassis Types

- R50 Coupe 09/00-11/06
- R52 Convertible 11/02-07/08
- R53 Coupe 09/00-11/06

Models Covered

- One, Cooper, Cooper S, Cooper S JCW GP

Notes

- PFR 51105 replaces the complete bush or use PFR 5110 inserts which fit into the original bush. They both fit models upto 2003 with an 80mm bush
- PFR 51104 replaces the complete bush or use PFR5-1102 inserts which fit into the original bush. They both fit models 2003 onwards with a 60mm bush
- PFF 5101MS is a optional support if using PFF 5101 for motorsport
- PFF 5104 & PFF 5105 Upper Engine Support Bracket bushes will not fit models 2004 onwards if using oil filled engine mounts
- For position 7 Lower Engine Mount Large Bush use either PFF 5107 insert which fits into the original bush or PFF 5120 a complete replacement bush

















PRODUCT PRICING INFORMATION

The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

Bush Price x Qty Per Car = Pack Price

In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.

	Bush description	Quantity Per Car	Diagram Reference	Part Number	Retail Price Each
	Front Wishbone Rear Bush 🔧 Click for fitting instructions	2	1	PFF 5101	
	PFF5-101 Support Kit	2	1	PFF 5101MS	
	Front Anti Roll Bar Bush 16mm	2	2	PFF 510216	
	Front Anti Roll Bar Bush 22.5mm	2	2	PFF 5102225	
	Front Anti Roll Bar Bush 24mm	2	2	PFF 510224	
	Steering Rack Mount	1	3	PFF 5103	
	Upper Engine Support Bracket Small Mount	1	4	PFF 5104	
	Upper Engine Mount Large Bush Insert	1	5	PFF 5105	
	Lower Engine Support Bracket Small	1	6	PFF 5104	
	Lower Engine Mount Large Bush Insert	1	7	PFF 5107	
	Lower Engine Mount Large Bush 🔧 Click for fitting instructions	1	7	PFF 5120	
	Gearbox Mounting Bush Insert	1	8	PFF 5108	
	Rear Control Arm Bushes	8	9	PFR 5109	
	Rear Trailing Arm Front Bush Inserts	2	10	PFR 5110	
	Rear Trailing Arm Front Bush Inserts 🔧 Click for fitting instructions	2	10	PFR 51102	
	Rear Trailing Arm Front Bush 🔧 Click for fitting instructions	2	10	PFR 51104	
	Rear Trailing Arm Front Bush 🔧 Click for fitting instructions	2	10	PFR 51105	
	Rear Anti Roll Bar Bush 16mm	2	11	PFR 511116	
	Rear Anti Roll Bar Bush 17mm	2	11	PFR 511117	
	Rear Anti Roll Bar Bush 18mm	2	11	PFR 511118	



Super Charger Belt Damper Bushes

2

12

PFF 5211



Rear Shock Top Mounting Bush

2

15

PFR 5115



Universal Bump Stop and Cover Kit

1

BS009K