


VOLKSWAGEN - GOLF MODELS - GOLF MK5 (2003 - 2009) - GOLF MK5 1K

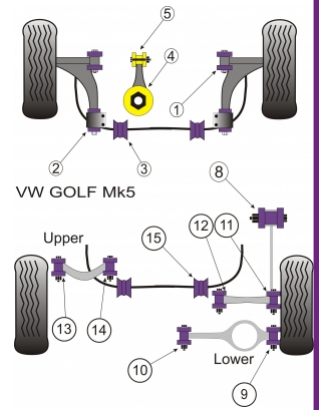

Notes

- PFF 85501G is on-car camber adjustable offering +/-0.5° of adjustment, for a non adjustable bush use PFF 85501.
- PFF 85502G gives 1° of additional caster angle and anti lift properties, the bush is supplied pre fitted into the new bracket, for a bush without geometry adjustment use PFF 85502.
- PFF 85504 fits vehicles upto the middle of 2008, please check the picture of the 2 bushes in order to identify the insert you require.
- PFF 85704 fits vehicles from the middle of 2008 on, please check the picture of the 2 bushes in order to identify the insert you require.



PRODUCT PRICING INFORMATION

The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

Bush Price x Qty Per Car = Pack Price

In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.

Bush description	Quantity Per Car	Diagram Reference	Part Number	Retail Price Each
------------------	------------------	-------------------	-------------	-------------------

	Front Wishbone Front Bush	2	1	PFF 85501	£24.62
	Front Wishbone Rear Bush	2	2	PFF 85502	
	Front Wishbone Rear Bush Anti-Lift & Caster Adjust Click for fitting instructions	2	2	PFF 85502G	
	Front Anti Roll Bar Bush 22.5mm	2	3	PFF 8550322.5	
	Front Anti Roll Bar Bush 23.6mm	2	3	PFF 8550323.6	
	Front Anti Roll Bar Bush 24mm	2	3	PFF 8550324	
	Lower Engine Mount Insert (Large) Click for fitting instructions	1	4	PFF 85504	
	Lower Engine Mount Insert (Large) Track Use Click for fitting instructions	1	4	PFF 85504P	
	Lower Engine Mount Insert (Large) Diesel Click for fitting instructions	1	4	PFF 85504R	
	Lower Engine Mount Insert (Large) Click for fitting instructions	1	4	PFF 85704	
	Lower Engine Mount Insert (Large) Track Use Click for fitting instructions	1	4	PFF 85704P	
	Lower Engine Mount Insert (Large) Diesel Click for fitting instructions	1	4	PFF 85704R	
	Lower Engine Mount Small Bush Click for fitting instructions	1	5	PFF 85505	
	Rear Tie Bar to Chassis Front Bush	2	8	PFR 85508	
	Rear Lower Spring Mount Outer	2	9	PFR 85509	
	Front Wishbone Front Bush Camber Adjustable Click for fitting instructions	2	1	PFF 85501G	
	Rear Lower Spring Mount Inner	2	10	PFR 85510	
	Rear Lower Link Outer Bush	2	11	PFR 85511	
	Rear Lower Link Inner Bush	2	12	PFR 85512	
	Rear Upper Link Outer Bush	2	13	PFR 85513	
	Rear Upper Link Inner Bush	2	14	PFR 85514	



Rear Anti Roll Bar Bush 18.5mm

2

15

PFR 8551518.5



Rear Anti Roll Bar Bush 19.6mm

2

15

PFR 8551519.6



Rear Anti Roll Bar Bush 20.5mm

2

15

PFR 8551520.5



Rear Anti Roll Bar Bush 20.7mm

2

15

PFR 8551520.7



Rear Anti Roll Bar Bush 21.7mm


2

15

PFR 8551521.7



Bump Stop Kit

 [Click for fitting instructions](#)

1

BS 2006K