


## VOLKSWAGEN - JETTA, BORA, VENTO MK5 1K (2005-2010)

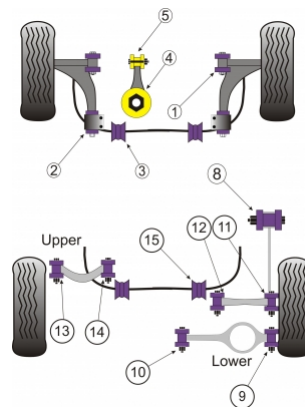

### Notes

- PFF 85501G is on-car camber adjustable offering +/-0.5° of adjustment, for a non adjustable bush use PFF 85501.
- PFF 85502G gives 1° of additional caster angle and anti lift properties, the bush is supplied pre fitted into the new bracket, for a bush without geometry adjustment use PFF85-502.
- PFF 85504 fits vehicles upto the middle of 2008, please check the picture of the 2 bushes in order to identify the insert you require.
- PFF 85704 fits vehicles from the middle of 2008 on, please check the picture of the 2 bushes in order to identify the insert you require.




### PRODUCT PRICING INFORMATION




















The prices shown on our website are per bush.












To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

**Bush Price x Qty Per Car = Pack Price**

In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.

Bush description	Quantity Per Car	Diagram Reference	Part Number	Retail Price Each
 <b>Front Wishbone Front Bush</b>	<b>2</b>	<b>1</b>	<b>PFF 85501</b>	

	<b>Front Wishbone Rear Bush</b>	2	2	<b>PFF 85502</b>
	<b>Front Wishbone Rear Bush Anti-Lift &amp; Caster Adjust</b> 🔧 Click for fitting instructions	2	2	<b>PFF 85502G</b>
	<b>Front Anti Roll Bar Bush 19.6mm</b>	2	3	<b>PFF 8550319.6</b>
	<b>Front Anti Roll Bar Bush 20mm</b>	2	3	<b>PFF 8550320</b>
	<b>Front Anti Roll Bar Bush 20.7mm</b>	2	3	<b>PFF 8550320.7</b>
	<b>Front Anti Roll Bar Bush 21.7mm</b>	2	3	<b>PFF 8550321.7</b>
	<b>Front Anti Roll Bar Bush 22.5mm</b>	2	3	<b>PFF 8550322.5</b>
	<b>Front Anti Roll Bar Bush 23mm</b>	2	3	<b>PFF 8550323</b>
	<b>Front Anti Roll Bar Bush 23.6mm</b>	2	3	<b>PFF 8550323.6</b>
	<b>Front Anti Roll Bar Bush 24mm</b>	2	3	<b>PFF 8550324</b>
	<b>Lower Engine Mount Insert (Large)</b> 🔧 Click for fitting instructions	1	4	<b>PFF 85504</b>
	<b>Lower Engine Mount Insert (Large) Track Use</b> 🔧 Click for fitting instructions	1	4	<b>PFF 85504P</b>
	<b>Lower Engine Mount Insert (Large) Diesel</b> 🔧 Click for fitting instructions	1	4	<b>PFF 85504R</b>
	<b>Lower Engine Mount Insert (Large)</b> 🔧 Click for fitting instructions	1	4	<b>PFF 85704</b>
	<b>Lower Engine Mount Insert (Large) Track Use</b> 🔧 Click for fitting instructions	1	4	<b>PFF 85704P</b>
	<b>Lower Engine Mount Insert (Large) Diesel</b> 🔧 Click for fitting instructions	1	4	<b>PFF 85704R</b>
	<b>Lower Engine Mount Small Bush</b> 🔧 Click for fitting instructions	1	5	<b>PFF 85505</b>
	<b>Rear Tie Bar to Chassis Front Bush</b>	2	8	<b>PFR 85508</b>
	<b>Rear Lower Spring Mount Outer</b>	2	9	<b>PFR 85509</b>
	<b>Front Wishbone Front Bush Camber Adjustable</b> 🔧 Click for fitting instructions	2	1	<b>PFF 85501G</b>
	<b>Rear Lower Spring Mount Inner</b>	2	10	<b>PFR 85510</b>

	<b>Rear Lower Link Outer Bush</b>	<b>2</b>	<b>11</b>	<b>PFR 85511</b>
	<b>Rear Lower Link Inner Bush</b>	<b>2</b>	<b>12</b>	<b>PFR 85512</b>
	<b>Rear Upper Link Outer Bush</b>	<b>2</b>	<b>13</b>	<b>PFR 85513</b>
	<b>Rear Upper Link Inner Bush</b>	<b>2</b>	<b>14</b>	<b>PFR 85514</b>
	<b>Rear Anti Roll Bar Bush 18mm</b>	<b>2</b>	<b>15</b>	<b>PFR 8551518</b>
	<b>Rear Anti Roll Bar Bush 18.5mm</b>	<b>2</b>	<b>15</b>	<b>PFR 8551518.5</b>
	<b>Rear Anti Roll Bar Bush 19mm</b>	<b>2</b>	<b>15</b>	<b>PFR 8551519</b>
	<b>Rear Anti Roll Bar Bush 19.6mm</b>	<b>2</b>	<b>15</b>	<b>PFR 8551519.6</b>
	<b>Rear Anti Roll Bar Bush 20mm</b>	<b>2</b>	<b>15</b>	<b>PFR 8551520</b>
	<b>Rear Anti Roll Bar Bush 20.5mm</b>	<b>2</b>	<b>15</b>	<b>PFR 8551520.5</b>
	<b>Rear Anti Roll Bar Bush 20.7mm</b>	<b>2</b>	<b>15</b>	<b>PFR 8551520.7</b>