



CORRADO (1989 - 1995)

PRICING INFORMATION

The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

Bush Price x Qty Per Car = Pack Price

Notes


- For power steering mount bushes please measure the width of bracket and select the correct part number.

PFF 85232 is suitable for vehicles with a 18.5mm wide bracket.

PFF 85233 is suitable for vehicles with a 15mm wide bracket.

- PFF 85239 Fits models from chassis 50-S-000 052 onwards.

In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.

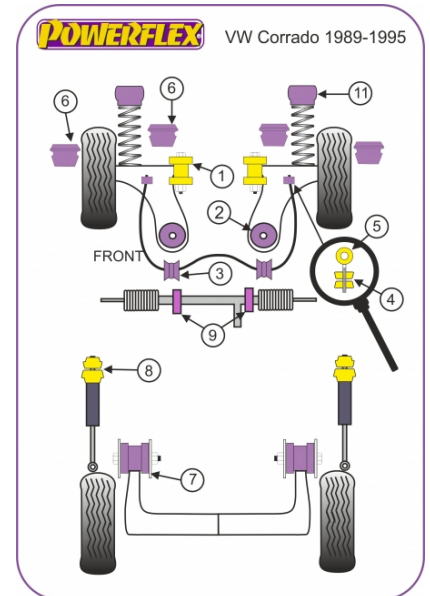

FRONT WISHBONE FRONT BUSH

Qty Per Car **2**

Diagram Ref. **1**

Part No. **PFF 85201**



FRONT WISHBONE REAR BUSH

Qty Per Car **2**

Diagram Ref. **2**

Part No. **PFF 85203**



FRONT ANTI ROLL BAR MOUNT 18MM

Qty Per Car **2**

Diagram Ref. **3**

Part No. **PFF 85205**



FRONT ANTI ROLL BAR BUSH 20MM

Qty Per Car **2**

Diagram Ref. **3**

Part No. **PFF 8520520**



FRONT EYE BOLT MOUNTING BUSH

Qty Per Car **2**

Diagram Ref. **4**

Part No. **PFF 85208**



FRONT EYE BOLT MOUNTING BUSH 10MM

Qty Per Car **2**

Diagram Ref. **4**

Part No. **PFF 8520810**



FRONT ANTI ROLL BAR EYE BOLT BUSH 18MM

Qty Per Car **2**

Diagram Ref. **5**

Part No. **PFF 85209**



FRONT ANTI ROLL BAR EYE BOLT BUSH 20MM

Qty Per Car **2**

Diagram Ref. **5**

Part No. **PFF 8520920**



FRONT CROSS MEMBER MOUNTING BUSH

Qty Per Car **4**

Diagram Ref. **6**

Part No. **PFF 85250**



REAR BEAM MOUNTING BUSH

Qty Per Car **2**

Diagram Ref. **7**

Part No. **PFR 85207**



REAR SHOCK TOP MOUNTING BUSH

Qty Per Car **2**

Diagram Ref. **8**

Part No. **PFR 85240**



POWER STEERING RACK MOUNT

Qty Per Car **1**

Diagram Ref. **9**

Part No. **PFF 85232**



POWER STEERING RACK MOUNT

Qty Per Car **1**

Diagram Ref. **9**

Part No. **PFF 85233**



FRONT STRUT, TOP MOUNT

Qty Per Car **2**

Diagram Ref. **11**

Part No. **PFF 85239**



BUMP STOP FRONT

Qty Per Car **2**

Diagram Ref.

Part No. **BS 006**



POWERALIGN CAMBER BOLT KIT (12MM)

Qty Per Car **1**

Diagram Ref.

Part No. **PFA 10012**



EXHAUST MOUNTS

Qty Per Car **1**

Diagram Ref.

Part No. **EXH 006**



BUMP STOP REAR

Qty Per Car **2**

Diagram Ref.

Part No. **BS 008**
