



## CORRADO VR6

### PRICING INFORMATION

The prices shown on our website are per bush.


To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

### Bush Price x Qty Per Car = Pack Price

#### Notes

- For power steering mount bushes please measure the width of the bracket and select the correct part number. 18.5mm wide bracket use PFF 85232, 15mm wide bracket use PFF 85333
- PFF 85239 fits models from chassis number 50\_N 000 001 onwards.

*In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.*

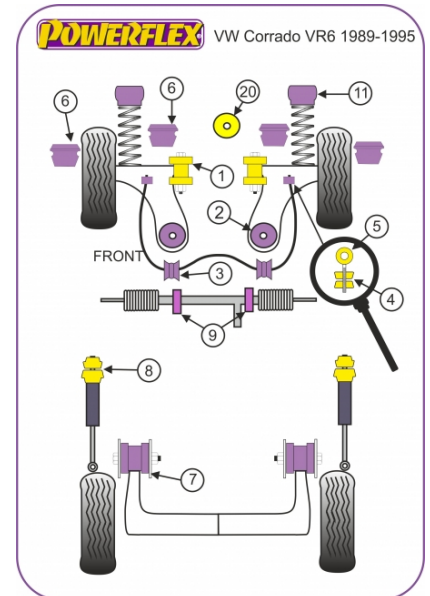

### FRONT WISHBONE FRONT BUSH

Qty Per Car 2

Diagram Ref. 1

Part No. **PFF 85201**



### FRONT WISHBONE REAR BUSH, VR6 MODELS

Qty Per Car 2

Diagram Ref. 2

Part No. **PFF 85204**



### FRONT ANTI ROLL BAR MOUNT 18MM

Qty Per Car 2

Diagram Ref. 3

Part No. **PFF 85205**



### FRONT ANTI ROLL BAR BUSH 20MM

Qty Per Car 2

Diagram Ref. 3

Part No. **PFF 8520520**



### FRONT ANTI ROLL BAR EYE BOLT BUSH 18MM

Qty Per Car 2

Diagram Ref. 5

Part No. **PFF 85209**



### FRONT ANTI ROLL BAR EYE BOLT BUSH 20MM

Qty Per Car 2

Diagram Ref. 5

Part No. **PFF 8520920**



### FRONT CROSS MEMBER MOUNTING BUSH

Qty Per Car **4**

Diagram Ref. **6**

Part No. **PFF 85250**

---



### REAR BEAM MOUNTING BUSH

Qty Per Car **2**

Diagram Ref. **7**

Part No. **PFR 85206**

---



### REAR SHOCK TOP MOUNTING BUSH

Qty Per Car **2**

Diagram Ref. **8**

Part No. **PFR 85240**

---



### POWER STEERING RACK MOUNT

Qty Per Car **1**

Diagram Ref. **9**

Part No. **PFF 85232**

---



### POWER STEERING RACK MOUNT

Qty Per Car **1**

Diagram Ref. **9**

Part No. **PFF 85233**

---



### FRONT STRUT, TOP MOUNT

Qty Per Car **2**

Diagram Ref. **11**

Part No. **PFF 85239**

---



### FRONT LOWER ENGINE MOUNTING BUSH & INSERTS

Qty Per Car **1**

Diagram Ref. **20**

Part No. **PFF 85280**

---



### BUMP STOP FRONT

Qty Per Car **2**

Diagram Ref.

Part No. **BS 006**

---



### POWERALIGN CAMBER BOLT KIT (12MM)

Qty Per Car **1**

Diagram Ref.

Part No. **PFA 10012**

---



### EXHAUST MOUNTS

Qty Per Car **1**

Diagram Ref.

Part No. **EXH 006**

---



### BUMP STOP REAR

Qty Per Car **2**

Diagram Ref.

Part No. **BS 008**

---