


VOLVO - 240 (1975 - 1993) VOLVO - 260 (1975 - 1985)

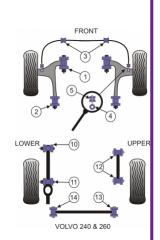



Notes

- PFF 88206-* fits early models with a plain D shaped bush, for later vehicles with additional shapes on the bush use PFF 88207-*
- PFR 88211 is a complete bush that fits into the original outer shell, PFR88-219 insert fits into the voids of the original bush.
- PFR 88212 fits arms with a parallel hole, not for tapered holes.

PRODUCT PRICING INFORMATION

The prices shown on our website are <u>per bush</u>.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

Bush Price x Qty Per Car = Pack Price

In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.

| | Bush description | Quantity Per Car | Diagram Reference | Part Number | Retail Price Each |
|---|--|---------------------|----------------------|----------------|----------------------|
| 4 | Front Arm Front Bush | 2 | 1 | PFF 88201 | |
| | Front Arm Rear Bush Click for fitting instructions | 2 | 2 | PFF 88202 | |

| | Front Anti Roll Bar Bush 19.5mm | 2 | 3 | PFF 8820619.5 | |
|------|---|---|----|---------------|--|
| | Front Anti Roll Bar Bush 21mm | 2 | 3 | PFF 8820621 | |
| | Front Anti Roll Bar Bush 19.5mm | 2 | 3 | PFF 8820719.5 | |
| | Front Anti Roll Bar Bush 21mm | 2 | 3 | PFF 8820721 | |
| - F | Front Anti Roll Bar Link To Arm Bush | 2 | 4 | PFF 88204 | |
| 4000 | Front Anti Roll Bar Link To Bar Bush | 2 | 5 | PFF 88205 | |
| 4 | Rear Trailing Arm To Chassis Bush | 2 | 10 | PFR 88210 | |
| | Rear Trailing Arm To Axle Bush Click for fitting instructions | 2 | 11 | PFR 88211 | |
| 100 | Rear Trailing Arm To Axle Bush Insert | 2 | 11 | PFR 88219 | |
| | Rear Upper Trailing Arm Bush | 4 | 12 | PFR 88212 | |
| - | Rear Panhard Rod To Axle Bush | 1 | 13 | PFR 88213 | |
| Į. | Rear Panhard Rod To Chassis Bush | 1 | 14 | PFR 88214 | |
| l | | | | | |