


## BMW - E36 3 SERIES (1990 - 1998)

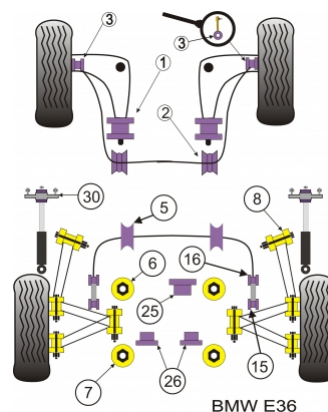

### Notes

- PFF 5303 is an eccentric bush for the M3 (non-Evo) or where increased castor is required
- PFF 5301 should be used where adjustable top mounts are fitted (i.e. on M3 Evo)
- Please check front and rear roll bar size before ordering.
- PFF 5304 is designed to fit models where the Anti Roll Bar joins the lower arm not the shock absorber. This part will not fit the M' versions as a consequence.
- PFR 5563010 fits cars with standard or aftermarket rear shock absorber with a 10mm pin, PFR 5563012 fits cars with aftermarket rear shock absorbers with a 12mm pin. Neither fit Cabriolet models
- PFR 5324 fits later M3 Evo models where the bush fits into a separate mounting bracket
- PFR 5325 fits all models, (M3 models up to 1996) with the bush in the subframe
- PFR 5326 fits all models including all M3 models

### PRODUCT PRICING INFORMATION

The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

**Bush Price x Qty Per Car = Pack Price**

In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.

Bush description	Quantity Per Car	Diagram Reference	Part Number	Retail Price Each



**Front Lower Wishbone Rear Bush  
Eccentric**

Click for fitting instructions

2

1

**PFF 5303**



**Rear Subframe Front Mounting Bush**

Click for fitting instructions

2

6

**PFR 53607**



**Rear Subframe Rear Mounting Bush**

Click for fitting instructions

2

7

**PFR 53606**



**Rear Trailing Arm Front Bush**

2

8

**PFR 53608**