


BMW - E46 3 SERIES (1999 - 2006) - E46 3 SERIES

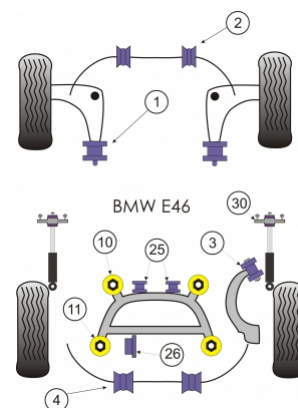

Notes:

- PFF 54601 & PFF 55601 fit brackets with a 66mm bore
- PFF 5460160 & PFF 5560160 fit brackets with a 60mm bore , usually found on earlier models.
- PFR 5563010 fits cars with standard or aftermarket rear shock absorber with a 10mm pin, PFR 5563012 fits cars with aftermarket rear shock absorbers with a 12mm pin. Neither fit Cabriolet models



PRODUCT PRICING INFORMATION

The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

Bush Price x Qty Per Car = Pack Price

In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.

Bush description	Quantity Per Car	Diagram Reference	Part Number	Retail Price Each
 Front Wishbone Rear Bush Click for fitting instructions	2	1	PFF 54601	
 Rear Trailing Arm Bush	2	3	PFR 53608	

**Rear Subframe Front Bush**[Click for fitting instructions](#)**2****10****PFR 54610****Rear Subframe Rear Bush**[Click for fitting instructions](#)**2****11****PFR 54611**