


BMW - E46 3 SERIES (1999 - 2006) - E46 3 SERIES M3

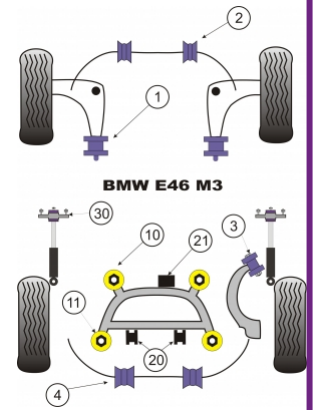

Notes

- PFR 55630-10 fits cars with standard or aftermarket rear shock absorber with a 10mm pin, PFR 5563012 fits cars with aftermarket rear shock absorbers with a 12mm pin. Neither fit Cabriolet models



PRODUCT PRICING INFORMATION

The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

Bush Price x Qty Per Car = Pack Price

In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.

Bush description	Quantity Per Car	Diagram Reference	Part Number	Retail Price Each
 Front Wishbone Rear Bush Click for fitting instructions	2	1	PFF 54601M3	
 Rear Trailing Arm Bush	2	3	PFR 53608	



Rear Subframe Front Bush
Click for fitting instructions

2

10

PFR 54610



Rear Subframe Rear Bush
Click for fitting instructions

2

11

PFR 54611