


## AUDI - 80, 90 INC AVANT (1973 - 1996)

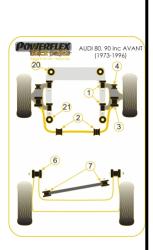



## Notes

PFF3-101 are for Pressed arms (37mm)

• PFF3-102 are for Cast arms (45mm)

PFF3-104 & PFF3-105 These fit up to chassis number 8B-L-003-791 1994, check front shock absorber after 1991 the anti roll bar may be linked to the wishbone with a metal joint so there will be no outer anti roll bar mount.

• PFF3-120-10 & PFF3-121-10 fit vehicles with 10mm mounting bolts, vehicles with 12mm bolts use

PFF3-120-12 & PFF3-121-12

• PFR3-110 fits up to 1992 chassis number 8A-N-200-000

• PFR3-111 fits after 1992 .

• PFR3-1011-21 & -23.5 Front anti roll bar mounts are tear drop shaped.

• PFF3-106-21.5 Fits models where there is no link rod between the anti roll bar and control arm.

## PRODUCT PRICING INFORMATION

The prices shown on our website are <u>per bush</u>. To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

## Bush Price x Qty Per Car = Pack Price

In addition to the Black Series parts listed please check the Road Series website for other bushes suitable for this car such as engine or transmission mountings.

	Bush description	Quantity Per Car	Diagram Reference	Part Number	Retail Price Each
1	PowerAlign Camber Bolt Kit (12mm) Science for fitting instructions	1		PFA100-12	
2	Front Wishbone Bush % Click for fitting instructions	4	1	PFF3-101BLK	
3.35	Front Wishbone Bush	4	1	PFF3-102BLK	
3	Front Anti Roll Bar Mount 24mm	2	2	PFF3-103-24BLK	
3	Front Anti Roll Bar Mount 25mm	2	2	PFF3-103-25BLK	
3.3	Front Outer Roll Bar Mount Lower 16mm	2	3	PFF3-105BLK	
2	Front Anti Roll Bar To Control Arm Bush	2	3	PFF3-106-21.5BL	к
8	Front Outer Roll Bar Mount Upper	2	4	PFF3-104BLK	
	Rear Beam Front Location Bush	2	6	PFR3-110BLK	
340	Rear Panhard Rod Bush	2	7	PFR3-109BLK	
201	Front Subframe Front Bush 10mm	2	20	PFF3-120-10BLK	
2015	Front Subframe Front Bush 12mm	2	20	PFF3-120-12BLK	
10	Front Subframe Rear Bush 10mm	2	21	PFF3-121-10BLK	
R.	Front Subframe Rear Bush 12mm	2	21	PFF3-121-12BLK	
į	Bump Stop Kit Sclick for fitting instructions	1		BS2004K	