



80, 90 QUATTRO INC AVANT (1983-1992) S2 CC (1991-1996)

The prices shown on our website are per bush.


To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

Bush Price x Qty Per Car = Pack Price

Notes

- PFF3-101 Fits 37mm Pressed Front Arms
- **PFF3-102 Fits 45mm Cast Front Arms**
- PFF3-104 & PFF3-105 Only Fit Up To 1992 Chassis Number 8A-N-200-000
- PFF3-106-21.5 Fits models where there is no link rod between the anti roll bar and control arm.
- PFF3-120-10 & PFF3-121-10 fit vehicles with 10mm mounting bolts, vehicles with 12mm bolts use PFF3-120-12 & PFF3-121-12
- PFR3-1011-21/23.5/25 Front anti roll bar mounts are tear drop shaped

In addition to the Black Series parts listed please check the Road Series website for other bushes suitable for this car such as engine or transmission mountings.

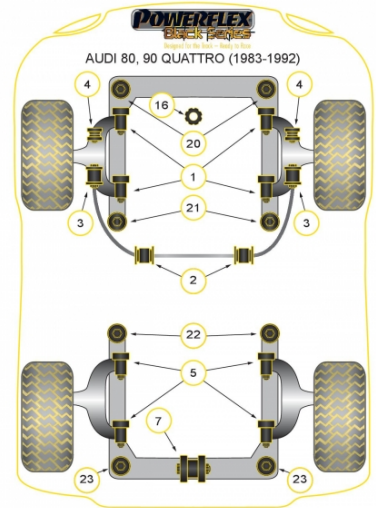

FRONT ANTI ROLL BAR MOUNT 25MM

Qty Per Car **2**

Diagram Ref. **2**

Part No. **PFR3-1011-25BLK**



FRONT WISHBONE BUSH

Qty Per Car **4**

Diagram Ref. **1**

Part No. **PFF3-101BLK**



FRONT WISHBONE BUSH

Qty Per Car **4**

Diagram Ref. **1**

Part No. **PFF3-102BLK**



FRONT ANTI ROLL BAR MOUNT 24MM

Qty Per Car **2**

Diagram Ref. **2**

Part No. **PFF3-103-24BLK**



FRONT ANTI ROLL BAR MOUNT 25MM

Qty Per Car **2**

Diagram Ref. **2**

Part No. **PFF3-103-25BLK**



FRONT OUTER ROLL BAR MOUNT LOWER 12MM

Qty Per Car **2**

Diagram Ref. **3**

Part No. **PFF3-105-12BLK**



FRONT OUTER ROLL BAR MOUNT LOWER 16MM

Qty Per Car 2

Diagram Ref. 3

Part No. **PFF3-105BLK**



FRONT ANTI ROLL BAR TO CONTROL ARM BUSH

Qty Per Car 2

Diagram Ref. 3

Part No. **PFF3-106-21.5BLK**



FRONT OUTER ROLL BAR MOUNT UPPER

Qty Per Car 2

Diagram Ref. 4

Part No. **PFF3-104BLK**



REAR WISHBONE BUSH

Qty Per Car 4

Diagram Ref. 5

Part No. **PFF3-101BLK**



REAR DIFFERENTIAL MOUNT

Qty Per Car 1

Diagram Ref. 7

Part No. **PFR3-107BLK**



ENGINE SNUB NOSE MOUNT

Qty Per Car 1

Diagram Ref. 16

Part No. **PFF3-220BLK**



FRONT SUBFRAME FRONT BUSH 10MM

Qty Per Car 2

Diagram Ref. 20

Part No. **PFF3-120-10BLK**



FRONT SUBFRAME FRONT BUSH 12MM

Qty Per Car 2

Diagram Ref. 20

Part No. **PFF3-120-12BLK**



FRONT SUBFRAME REAR BUSH 10MM

Qty Per Car 2

Diagram Ref. 21

Part No. **PFF3-121-10BLK**



FRONT SUBFRAME REAR BUSH 12MM

Qty Per Car 2

Diagram Ref. 21

Part No. **PFF3-121-12BLK**



REAR SUBFRAME FRONT BUSH 10MM

Qty Per Car 2

Diagram Ref. 22

Part No. **PFF3-121-10BLK**



REAR SUBFRAME FRONT BUSH 12MM

Qty Per Car 2

Diagram Ref. 22

Part No. **PFF3-121-12BLK**



REAR SUBFRAME REAR BUSH 10MM

Qty Per Car **2**

Diagram Ref. **23**

Part No. **PFF3-120-10BLK**



REAR SUBFRAME REAR BUSH 12MM

Qty Per Car **2**

Diagram Ref. **23**

Part No. **PFF3-120-12BLK**
