



## COUPE (1981-1996)

The prices shown on our website are per bush.


To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

**Bush Price x Qty Per Car = Pack Price**

### Notes

- PFF3-101 Are For Steel Wishbones
- PFF3-102 Are For Alloy Wishbones
- PFF3-104 & PFF3-105 Only Fit Up To 1994 Chassis Number 8B-L-003 791
- PFR3-1011-21 & -23.5 Front anti roll bar mounts are tear drop shaped.
- PFF3-106-21.5 Fits models where there is no link rod between the anti roll bar and control arm.
- PFF3-120-10 & PFF3-121-10 fit vehicles with 10mm mounting bolts, vehicles with 12mm bolts use PFF3-120-12 & PFF3-121-12

*In addition to the Black Series parts listed please check the Road Series website for other bushes suitable for this car such as engine or transmission mountings.*

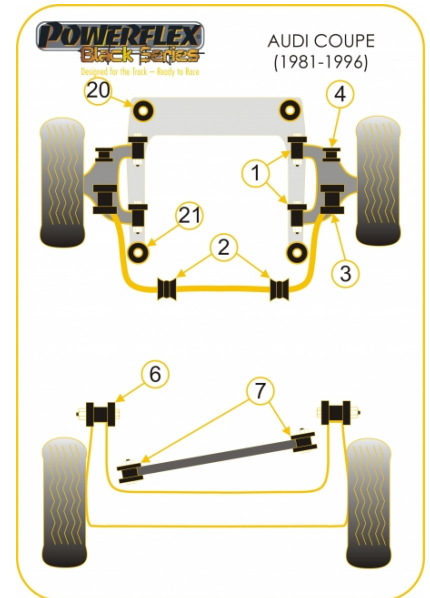

### POWERALIGN CAMBER BOLT KIT (12MM)

Qty Per Car **1**

Diagram Ref. **N/A**

Part No. **PFA100-12**



### FRONT WISHBONE BUSH

Qty Per Car **4**

Diagram Ref. **1**

Part No. **PFF3-101BLK**



### FRONT WISHBONE BUSH

Qty Per Car **4**

Diagram Ref. **1**

Part No. **PFF3-102BLK**



### FRONT ANTI ROLL BAR MOUNT 24MM

Qty Per Car **2**

Diagram Ref. **2**

Part No. **PFF3-103-24BLK**



### FRONT ANTI ROLL BAR MOUNT 25MM

Qty Per Car **2**

Diagram Ref. **2**

Part No. **PFF3-103-25BLK**



### FRONT OUTER ROLL BAR MOUNT LOWER 12MM

Qty Per Car **2**

Diagram Ref. **3**

Part No. **PFF3-105-12BLK**



### FRONT OUTER ROLL BAR MOUNT LOWER 16MM

Qty Per Car 2

Diagram Ref. 3

Part No. **PFF3-105BLK**



### FRONT ANTI ROLL BAR TO CONTROL ARM BUSH

Qty Per Car 2

Diagram Ref. 3

Part No. **PFF3-106-21.5BLK**



### FRONT OUTER ROLL BAR MOUNT UPPER

Qty Per Car 2

Diagram Ref. 4

Part No. **PFF3-104BLK**



### REAR BEAM FRONT LOCATION BUSH

Qty Per Car 2

Diagram Ref. 6

Part No. **PFR3-110BLK**



### REAR PANHARD ROD BUSH

Qty Per Car 2

Diagram Ref. 7

Part No. **PFR3-109BLK**



### FRONT SUBFRAME FRONT BUSH 10MM

Qty Per Car 2

Diagram Ref. 20

Part No. **PFF3-120-10BLK**



### FRONT SUBFRAME FRONT BUSH 12MM

Qty Per Car 2

Diagram Ref. 20

Part No. **PFF3-120-12BLK**



### FRONT SUBFRAME REAR BUSH 10MM

Qty Per Car 2

Diagram Ref. 21

Part No. **PFF3-121-10BLK**



### FRONT SUBFRAME REAR BUSH 12MM

Qty Per Car 2

Diagram Ref. 21

Part No. **PFF3-121-12BLK**



### BUMP STOP KIT

Qty Per Car 1

Diagram Ref.

Part No. **BS2004K**