


BMW - E30 3 SERIES (1982 - 1991)

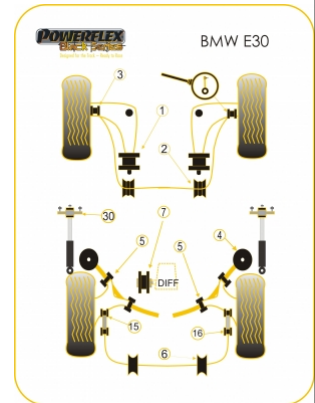

Notes

- Please check front and rear roll bar size before ordering
- PFF5-303 is an eccentric bush for the M3. This can be fitted to all models through out the range giving them increased castor to match the M3 setup.
- PFF5-304 is designed to fit models where the Anti Roll Bar joins lower arm not the shock absorber.
- For the rear trailing arm use either PFR5-306BLK or on-car adjustable bushes PFR5-306GBLK.


PRODUCT PRICING INFORMATION

The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

Bush Price x Qty Per Car = Pack Price

In addition to the Black Series parts listed please check the Road Series website for other bushes suitable for this car such as engine or transmission mountings.

Bush description	Quantity Per Car	Diagram Reference	Part Number
 Front Lower Wishbone Rear Bush	2	1	PFF5-301BLK

	Front Lower Wishbone Rear Bush Caster Offset Click for fitting instructions	2	1	PFF5-303BLK
	Front Anti Roll Bar Bush 19mm	2	2	PFF5-302-19BLK
	Front Anti Roll Bar Bush 20mm	2	2	PFF5-302-20BLK
	Front Anti Roll Bar Bush 22mm	2	2	PFF5-302-22BLK
	Anti Roll Bar Link Rod Bush	2	3	PFF5-304BLK
	Rear Beam Mounting Bush	2	4	PFR5-305BLK
	Rear Trailing Arm Bush	4	5	PFR5-306BLK
	Rear Trailing Arm Bush Adjustable Click for fitting instructions	4	5	PFR5-306GBLK
	Rear Roll Bar Mounting Bush 12mm	2	6	PFR5-308-12BLK
	Rear Roll Bar Mounting Bush 14mm	2	6	PFR5-308-14BLK
	Rear Roll Bar Mounting Bush 15.5mm	2	6	PFR5-308-15.5BLK
	Rear Roll Bar Mounting Bush 16mm	2	6	PFR5-308-16BLK
	Rear Roll Bar Mounting Bush 18mm	2	6	PFR5-308-18BLK
	Rear Diff Mounting Bush	1	7	PFR5-300BLK
	Rear Anti Roll Bar Link To Arm Bush Click for fitting instructions	2	15	PFR5-315BLK
	Rear Anti Roll Bar Link To Anti Roll Bar Bush Click for fitting instructions	2	16	PFR5-316BLK
	Bump Stop Kit Click for fitting instructions	1		BS2003K