


## BMW - E46 3 SERIES (1999 - 2006) - E46 3 SERIES XI/XD

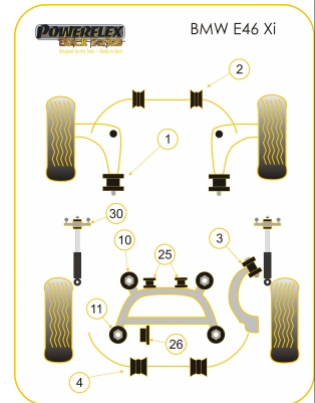

### Notes

- PFR5-4610 & 4611 are complete replacement bushes, for inserts use PFR5-4613 & 4614 (inserts fit into the voiding of the original bush)
- PFR5-5630-10 fits cars with standard or aftermarket rear shock absorber with a 10mm pin, PFR5-5630-12 fits cars with aftermarket rear shock absorbers with a 12mm pin. Neither fit Cabriolet models



### PRODUCT PRICING INFORMATION

The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

**Bush Price x Qty Per Car = Pack Price**

In addition to the Black Series parts listed please check the Road Series website for other bushes suitable for this car such as engine or transmission mountings.

Bush description	Quantity Per Car	Diagram Reference	Part Number
 <b>Front Wishbone Rear Bush</b> <a href="#">Click for fitting instructions</a>	2	1	<b>PFF5-4601XIBLK</b>
 <b>Front Anti Roll Bar Bush 21.5mm</b>	2	2	<b>PFF5-4602-21BLK</b>

	<b>Front Anti Roll Bar Bush 23.5mm</b>	2	2	<b>PFF5-4602-23.5BLK</b>
	<b>Front Anti Roll Bar Bush 23mm</b>	2	2	<b>PFF5-4602-23BLK</b>
	<b>Front Anti Roll Bar Bush 24mm</b>	2	2	<b>PFF5-4602-24BLK</b>
	<b>Front Anti Roll Bar Bush 26mm</b>	2	2	<b>PFF5-4602-26BLK</b>
	<b>Front Anti Roll Bar Mounting Bush 27mm</b>	2	2	<b>PFF5-4602-27BLK</b>
	<b>Front Anti Roll Bar Bush 30.8mm</b>	2	2	<b>PFF5-4602-30.8BLK</b>
	<b>Rear Trailing Arm Bush</b>	2	3	<b>PFR5-3608BLK</b>
	<b>Rear Roll Bar Mounting Bush 15mm</b>	2	4	<b>PFR5-504-15BLK</b>
	<b>Rear Roll Bar Mounting Bush 18mm</b>	2	4	<b>PFR5-504-18BLK</b>
	<b>Rear Roll Bar Mounting Bush 19mm</b>	2	4	<b>PFR5-504-19BLK</b>
	<b>Rear Subframe Front Bush</b>	2	10	<b>PFR5-4610BLK</b>
	<b>Rear Subframe Front Bush Insert</b>	2	10	<b>PFR5-4614BLK</b>
	<b>Rear Subframe Rear Bush</b>	2	11	<b>PFR5-4611BLK</b>
	<b>Rear Subframe Rear Bush Insert</b>	2	11	<b>PFR5-4613BLK</b>
	<b>Rear Diff Front Bush</b>  <a href="#">Click for fitting instructions</a>	2	25	<b>PFR5-4625BLK</b>
	<b>Rear Diff Rear Bush</b>  <a href="#">Click for fitting instructions</a>	1	26	<b>PFR5-4626BLK</b>
	<b>Rear Shock Top Mount Bracket and Bush 10mm</b>  <a href="#">Click for fitting instructions</a>	2	30	<b>PFR5-5630-10BLK</b>
	<b>Rear Shock Top Mount Bracket and Bush 12mm</b>  <a href="#">Click for fitting instructions</a>	2	30	<b>PFR5-5630-12BLK</b>