


BMW - E53 X5 (1999-2006)

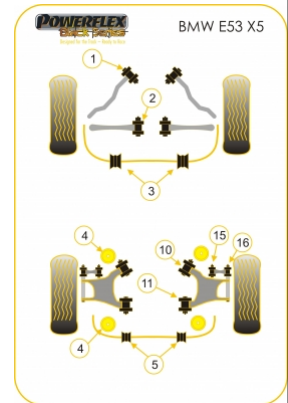






PRODUCT PRICING INFORMATION






The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

Bush Price x Qty Per Car = Pack Price

In addition to the Black Series parts listed please check the Road Series website for other bushes suitable for this car such as engine or transmission mountings.

Bush description	Quantity Per Car	Diagram Reference	Part Number
 PowerAlign Camber Bolt Kit (16mm) Click for fitting instructions	1		PFA100-16
 Front Lower Radius Arm To Chassis Bush Click for fitting instructions	2	1	PFF5-901BLK
 Front Control Arm To Chassis Bush	2	2	PFF5-902BLK
 Front Anti Roll Bar To Chassis 29mm	2	3	PFF5-905-29BLK
 Rear Subframe To Chassis Bush Click for fitting instructions	4	4	PFR5-908

	Rear Anti Roll Bar Mounting Bush 23.5mm	2	5	PFR5-4609-23.5BLK
	Rear Lower Arm Front Bush	2	10	PFR5-710BLK
	Rear Lower Arm Rear Bush	2	11	PFR5-711BLK
	Rear Outer Integral Link Upper Bush Click for fitting instructions	2	15	PFR5-715BLK
	Rear Outer Integral Link Lower Bush Click for fitting instructions	2	16	PFR5-716BLK