


## BMW - E81, E82, E87 & E88 1 SERIES (2004-2013) - E81, E82, E87 & E88 1 SERIES (2004-2013)

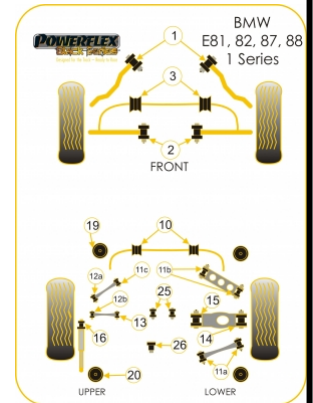

### Notes:

- These parts will not fit the E82 1-Series M-Coupe or X Drive (4wd) models
- **PFR5-419, PFR5-421 and PFR5-423`s are inserts to be used with the original bushes**
- **PFR5-420 and PFR5-422`s are complete bushes and used to replace the original bushes**
- **PFR5-1220 increases anti squat to that of the M series, for std location of the subframe front mount use PFR5-420**
- **PFR5-421 Insert fits all models up to -07/2005. Then Automatic models only from 07/2005- on**
- **PFR5-423 Inserts fit manual cars from 07/2005- onwards**
- **PFR5-416-12 fits performance shock absorber which has 12mm thread**
- **For standard shock absorbers and performance shock absorber with a 10mm thread use PFR5-416**

### PRODUCT PRICING INFORMATION


The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

**Bush Price x Qty Per Car = Pack Price**

In addition to the Black Series parts listed please check the Road Series website for other bushes suitable for this car such as engine or transmission mountings.

Bush description	Quantity Per Car	Diagram Reference	Part Number
 <b>Front Radius Arm To Chassis Bush</b>	2	1	PFF5-401BLK
 <b>Front Control Arm To Chassis Bush</b> <a href="#">Click for fitting instructions</a>	2	2	PFF5-402BLK
 <b>Front Anti Roll Bar Mounting Bush 26.5mm</b>	2	3	PFF5-4602-26.5BLK
 <b>Rear Anti Roll Bar Mounting Bush 11mm</b>	2	10	PFR5-4609-11BLK
 <b>Rear Toe Adjust Arm Inner &amp; Outer Bush</b>	4	11a	PFR5-411BLK
 <b>Rear Trailing Arm Inner &amp; Outer Bush</b>	4	11b	PFR5-411BLK
 <b>Rear Upper Control Arm To Chassis Bush</b>	2	11c	PFR5-411BLK
 <b>Rear Upper Control Arm To Hub Bush</b>	2	12a	PFR5-412BLK
 <b>Rear Upper Lateral Arm To Hub Bush</b>	2	12b	PFR5-412BLK
 <b>Rear Upper Lateral Arm To Chassis Bush</b> <a href="#">Click for fitting instructions</a>	2	13	PFR5-413BLK
 <b>Rear Lower Lateral Arm To Hub Bush</b>	2	14	PFR5-414BLK
 <b>Rear Lower Lateral Arm To Chassis Bush</b>	2	15	PFR5-415BLK
 <b>Rear Shock Absorber Upper Mounting Bush 12mm</b>	2	16	PFR5-416-12BLK
 <b>Rear Shock Absorber Upper Mounting Bush</b>	2	16	PFR5-416BLK
 <b>Rear Subframe, Front Bush</b> <a href="#">Click for fitting instructions</a>	2	19	PFR5-1220BLK
 <b>Rear Subframe Front Mount Insert</b>	2	19	PFR5-419BLK
 <b>Rear Subframe Front Mounting Bush</b>	2	19	PFR5-420BLK
 <b>Rear Subframe Rear Mounting Insert</b>	2	20	PFR5-421BLK
 <b>Rear Subframe Rear Mounting Bush</b>	2	20	PFR5-422BLK
 <b>Rear Subframe Rear Mounting Insert</b>	2	20	PFR5-423BLK
 <b>Rear Diff Front Mounting Bush</b>	2	25	PFR5-425BLK



**Rear Diff Rear Mounting Bush**

**1**

**26**

**PFR5-426BLK**