


BMW - E83 X3 (2003-2010)

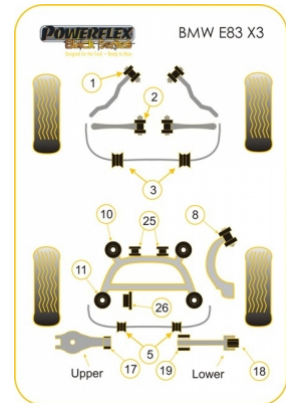

Notes

- PFR5-4610 & 4611 are complete replacement bushes, for inserts use PFR5-4613 & 4614 (inserts fit into the voiding of the original bush)
- PFR5-4615G replaces the original arm and inner bush and allows on car adjustment of camber. For a replacement bush only to fit in the original arm, please use PFR5-4616.


PRODUCT PRICING INFORMATION

The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

Bush Price x Qty Per Car = Pack Price

In addition to the Black Series parts listed please check the Road Series website for other bushes suitable for this car such as engine or transmission mountings.

Bush description	Quantity Per Car	Diagram Reference	Part Number
 Front Lower Radius Arm To Chassis Bush Click for fitting instructions	2	1	PFF5-901BLK

	Front Control Arm To Chassis Bush	2	2	PFF5-1502BLK
	Front Anti Roll Bar Mounting Bush 22.5mm	2	3	PFF5-1503-22.5BLK
	Front Anti Roll Bar Mounting Bush 23.5mm	2	3	PFF5-1503-23.5BLK
	Rear Trailing Arm Bush	2	3	PFR5-3608BLK
	Rear Anti Roll Bar Mounting Bush 17.5mm	2	5	PFR5-4609-17.5BLK
	Rear Anti Roll Bar Mounting Bush 18.5mm	2	5	PFR5-4609-18.5BLK
	Rear Subframe Front Bush	2	10	PFR5-4610BLK
	Rear Subframe Front Bush Insert	2	10	PFR5-4614BLK
	Rear Subframe Rear Bush	2	11	PFR5-4611BLK
	Rear Subframe Rear Bush Insert	2	11	PFR5-4613BLK
	Rear Upper Arm Inner Bush Click for fitting instructions	2	17	PFR5-4617BLK
	Rear Lower Arm Outer Bush	2	18	PFR5-4618BLK
	Adjustable Rear Lower Control Arm Kit Click for fitting instructions	1	19	PFR5-4615G
	Rear Lower Control Arm Inner Bush Click for fitting instructions	2	19	PFR5-4616BLK
	Rear Diff Front Bush Click for fitting instructions	2	25	PFR5-4625BLK
	Rear Diff Rear Bush Click for fitting instructions	1	26	PFR5-4626BLK