

E46 3 SERIES M3

PRICING INFORMATION

The prices shown on our website are <u>per bush</u>. To get the total pack price you will need to multiple this price by the number of bushes per vehicle.


Bush Price x Qty Per Car = Pack Price

Notes

- PFF5-5601GM3 gives an additional +0.5° Caster
- PFR5-4610 & 4611 are complete replacement bushes, for inserts use PFR5-4612 & 4613 (inserts fit into the voiding of the original bush)
- PFR5-4615G replaces the original arm and inner bush and allows on car adjustment of camber. For a replacement bush only to fit in the original arm, please use PFR5-4616.
- PFR5-4615G replaces the original arm and inner bush and allows on car adjustment of camber. For a replacement bush only to fit in the original arm, please use PFR5-4616.
- PFR5-5630-10 fits cars with standard or aftermarket rear shock absorber with a 10mm pin, PFR5-5630-12 fits cars with aftermarket rear shock absorbers with a 12mm pin. Neither fit Cabriolet models

In addition to the Black Series parts listed please check the Road Series website for other bushes suitable for this car such as engine or transmission mountings.

PONJERELEX Market Source Market Source	FRONT WISHBONE REAR BUSH, CASTER OFFSET				
	Qty Per Car 2	Diagram Ref. 1	Part No. PFF5-5601GM3BLK		
POWERELEX Clark Sones Register States	FRONT WISHBONE REAR BUSH, ALUMINIUM OUTER				
089	Qty Per Car 2	Diagram Ref. 1	Part No. PFF5-5601M3BLK		
POWERFLEX Shark some	FRONT WISHBONE REAR BUSH				
	Qty Per Car 2	Diagram Ref. 1	Part No. PFF5-4601M3BLK		
	FRONT ANTI ROLL BAR BUSH 26MM				
	Qty Per Car 2	Diagram Ref. 2	Part No. PFF5-4602-26BLK		
POWERELEX CONCENSION WILL FOR THE SAME	FRONT ANTI ROLL BAR MOUNTING BUSH 27MM				
	Qty Per Car 2	Diagram Ref. 2	Part No. PFF5-4602-27BLK		

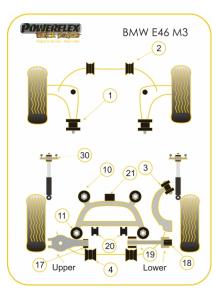

POWERELEX	FRONT ANTI ROLL BAR B	FRONT ANTI ROLL BAR BUSH 30.8MM				
00	Qty Per Car 2	Diagram Ref. 2	Part No. PFF5-4602-30.8BLK			
POMERELEX CARK SOME Mark Some Mark Some	REAR TRAILING ARM BUSH					
0	Qty Per Car 2	Diagram Ref. 3	Part No. PFR5-3608BLK			
POMERCLEX March Control Restriction of Control Restriction of Control	REAR ROLL BAR MOUNTING BUSH 21.5MM					
	Qty Per Car 2	Diagram Ref. 4	Part No. PFR5-4609-21.5BLK			
Powerrelex	REAR ROLL BAR MOUNTING BUSH 22.5MM					
64	Qty Per Car 2	Diagram Ref. 4	Part No. PFR5-4609-22.5BLK			
Powrettelex Cark Estrate Burle Handware	REAR SUBFRAME FRONT BUSH					
	Qty Per Car 2	Diagram Ref. 10	Part No. PFR5-4610BLK			
	REAR SUBFRAME FRONT BUSH INSERT					
00	Qty Per Car 2	Diagram Ref. 10	Part No. PFR5-4612BLK			
Powertelex	REAR SUBFRAME REAR BUSH					
	Qty Per Car 2	Diagram Ref. 11	Part No. PFR5-4611BLK			
POMERCELEX March Control Residencial Control Residencial Control	REAR SUBFRAME REAR BUSH INSERT					
88	Qty Per Car 2	Diagram Ref. 11	Part No. PFR5-4613BLK			
Powerelex	REAR UPPER ARM INNER BUSH					
	Qty Per Car 2	Diagram Ref. 17	Part No. PFR5-4617BLK			
Powertelex	REAR LOWER ARM OUTER BUSH					
970	Qty Per Car 2	Diagram Ref. 18	Part No. PFR5-4618BLK			
	ADJUSTABLE REAR LOWER CONTROL ARM KIT					
	Qty Per Car 1	Diagram Ref. 19	Part No. PFR5-4615G			
PONIETELEX Sinck Souther South Status	REAR LOWER CONTROL ARM INNER BUSH					
	Qty Per Car 2	Diagram Ref. 19	Part No. PFR5-4616BLK			

Pontent Et	REAR DIFF REAR MOUNT				
	Qty Per Car 2	Diagram Ref. 20	Part No. PFR5-4620BLK		
POWERCLEX Clark Source Build and Lington	REAR DIFF FRONT MOUNT				
	Qty Per Car 1	Diagram Ref. 21	Part No. PFR5-4621BLK		
POWERFLEX SPEX FORM	REAR SHOCK TOP MOUNT BRACKET AND BUSH 10MM				
	Qty Per Car 2	Diagram Ref. 30	Part No. PFR5-5630-10BLK		
POWERELEX Grant Context	REAR SHOCK TOP MOUNT BRACKET AND BUSH 12MM				
	Qty Per Car 2	Diagram Ref. 30	Part No. PFR5-5630-12BLK		