

## CLIO III SPORT 197/200 (2005 - 2012)

## PRICING INFORMATION

The prices shown on our website are <u>per bush</u>. To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

## Bush Price x Qty Per Car = Pack Price

Notes:


- PFF60-801G allows on-car adjustment of camber, fit PFF60-801 for a non adjustable bush.
- PFF60-802G is caster adjustable and gives additional anti lift, fit PFF60-802 for a non adjustable bush.
- PFF60-803-\* is half the length of the bracket and uses a spacer, this fits vehicles from May 2009 onwards.
- PFF60-503-\* is with full length bush with no spacer and is used on vehicles upto May 2009.
- PFF60-820 Fits vehicles with a rubberized bracket, for vehicles with extruded alloy bracket use PFF60-526.





In addition to the Black Series parts listed please check the Road Series website for other bushes suitable for this car such as engine or transmission mountings.

**FRONT ARM FRONT BUSH** 

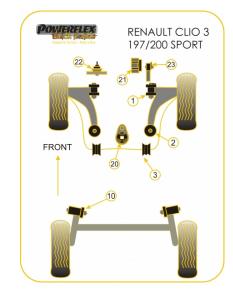

	Qty Per Car <b>2</b>	Diagram Ref. <b>1</b>	Part No. <b>PFF60-801BLK</b>		
POWERCIEN	FRONT ARM FRONT BUSH CAMBER ADJUSTABLE				
	Qty Per Car <b>2</b>	Diagram Ref. <b>1</b>	Part No. <b>PFF60-801GBLK</b>		
Powerslaw	FRONT ARM REAR BUSH				
	Qty Per Car 2	Diagram Ref. <b>2</b>	Part No. <b>PFF60-802BLK</b>		
Pomerates	FRONT ARM REAR BUSH ANTI-LIFT & CASTER OFFSET				
	Qty Per Car 2	Diagram Ref. <b>2</b>	Part No. <b>PFF60-802GBLK</b>		
POWERFLEX	FRONT ANTI ROLL BAR BUSH 20MM				
	Qty Per Car 2	Diagram Ref. <b>3</b>	Part No. <b>PFF60-503-20BLK</b>		

Powjettelex Since Sories	FRONT ANTI ROLL BAR BUSH 20.5MM			
	Qty Per Car <b>2</b>	Diagram Ref. <b>3</b>	Part No. <b>PFF60-803-20.5BLK</b>	
Powerta A	REAR BEAM MOUNTING BUSH			
	Qty Per Car <b>2</b>	Diagram Ref. <b>10</b>	Part No. <b>PFR60-810BLK</b>	
	REAR LOWER ENGINE MOUNTING BUSH			
	Qty Per Car 1	Diagram Ref. <b>20</b>	Part No. <b>PFF60-526BLK</b>	
00	LOWER ENGINE MOUNT INSERT			
	Qty Per Car 1	Diagram Ref. 20	Part No. <b>PFF60-820BLK</b>	
POMEREN	UPPER ENGINE MOUNT INSERT			
	Qty Per Car ${f 1}$	Diagram Ref. <b>21</b>	Part No. <b>PFF60-821BLK</b>	
	GEARBOX MOUNTING BUSH INSERT			
	Qty Per Car 1	Diagram Ref. 22	Part No. <b>PFF60-525BLK</b>	
POWERELEX CHECK SOLOG Real for the start	UPPER ENGINE MOUNT TORQUE ARM BUSH			
00	Qty Per Car <b>1</b>	Diagram Ref. 23	Part No. PFF60-822BLK	