


## SAAB - 9-5 (1998-2010) YS3E

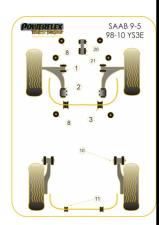



## **Notes**

- PFF66-205 bush is fitted on model year 2000 cars onwards
- PFF66-205 has 62mm O/D at the rear of the bush and fits year 2000 onwards.
- PFF66-201 has 52mm O/D at the rear of the bush and fits pre year 2000 models.
- PFR66-211-17 Fits Aero Models. For Non Aero models use PFR66-210-17.
- PFF66-221 fits manual cars year 2000 on
- PFF66-221R fits manual cars year 2000 on, it is softer and more suited to diesel engined cars.
- PFF66-222 only fits automatic petrol cars year 2000 on.

## PRODUCT PRICING INFORMATION

The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

## Bush Price x Qty Per Car = Pack Price

In addition to the Black Series parts listed please check the Road Series website for other bushes suitable for this car such as engine or transmission mountings.

Bush description	Quantity	Diagram	Part
	Per Car	Reference	Number
PowerAlign Camber Bolt Kit (12mm)  Click for fitting instructions	1	,	PFA100-12

112	Front Wishbone Front Bush	2	1	PFF66-202BLK	
90	Front Wishbone Rear Bush	2	2	PFF66-201BLK	
1188	Front Wishbone Rear Bush	2	2	PFF66-205BLK	
2	Front Anti Roll Bar Mounting Bush 18mm	2	3	PFF66-206-18BLK	
	Front Anti Roll Bar Mounting Bush 20mm	2	3	PFF66-206-20BLK	
	Front Anti Roll Bar Mounting Bush 21mm	2	3	PFF66-206-21BLK	
	Front Subframe Mounting Bush  Click for fitting instructions	6	8	PFF66-208BLK	
350	Rear Trailing Arm Bush	2	10	PFR66-110BLK	
	Rear Anti Roll Bar Bush 16mm	2	11	PFR66-210-16BLK	
	Rear Anti Roll Bar Bush 17mm	2	11	PFR66-210-17BLK	
1	Rear Anti Roll Bar Bush 17mm	2	11	PFR66-211-17BLK	
30	Engine Torque Rod To Subframe Bush	1	20	PFF66-220BLK	
6	Engine Torque Rod To Engine Bush, Manual Petrol	1	21	PFF66-221BLK	