


## VOLKSWAGEN - GOLF MODELS - GOLF MK5 (2003 - 2009) - GOLF MK5 1K

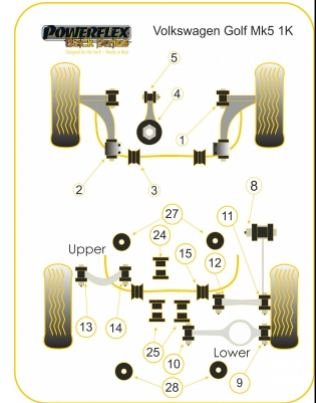

### Notes

- PFF85-501G is on-car camber adjustable offering +/-0.5° of adjustment, for a non adjustable bush use PFF85-501.
- PFF85-502G gives 1° of additional caster angle and anti lift properties, the bush is supplied pre fitted into the new bracket, for a bush without geometry adjustment use PFF85-502.
- PFF85-504 fits vehicles upto the middle of 2008, please check the picture of the 2 bushes in order to identify the insert you require.
- PFF85-704 fits vehicles from the middle of 2008 on, please check the picture of the 2 bushes in order to identify the insert you require.
- PFR85-524, PFR85-525, PFR85-527 & PFR85-528 fit 4 wheel drive models only.

### PRODUCT PRICING INFORMATION




The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

**Bush Price x Qty Per Car = Pack Price**

In addition to the Black Series parts listed please check the Road Series website for other bushes suitable for this car such as engine or transmission mountings.

	Bush description	Quantity Per Car	Diagram Reference	Part Number
	<b>Front Wishbone Front Bush</b>	2	1	<b>PFF85-501BLK</b>
	<b>Front Wishbone Rear Bush</b>	2	2	<b>PFF85-502BLK</b>
	<b>Front Wishbone Rear Bush Anti-Lift &amp; Caster Offset</b> <a href="#">Click for fitting instructions</a>	2	2	<b>PFF85-502GBLK</b>
	<b>Front Anti Roll Bar Bush 22.5mm</b>	2	3	<b>PFF85-503-22.5BLK</b>
	<b>Front Anti Roll Bar Bush 23.6mm</b>	2	3	<b>PFF85-503-23.6BLK</b>
	<b>Front Anti Roll Bar Bush 24mm</b>	2	3	<b>PFF85-503-24BLK</b>
	<b>Lower Engine Mount Insert (Large)</b>	1	4	<b>PFF85-504BLK</b>
	<b>Lower Engine Mount Insert (Large)</b>	1	4	<b>PFF85-704BLK</b>
	<b>Lower Engine Mount Small Bush</b>	1	5	<b>PFF85-505BLK</b>
	<b>Rear Tie Bar to Chassis Front Bush</b>	2	8	<b>PFR85-508BLK</b>
	<b>Rear Lower Spring Mount Outer</b>	2	9	<b>PFR85-509BLK</b>
	<b>Rear Lower Spring Mount Inner</b>	2	10	<b>PFR85-510BLK</b>
	<b>Rear Lower Link Outer Bush</b>	2	11	<b>PFR85-511BLK</b>
	<b>Rear Lower Link Inner Bush</b>	2	12	<b>PFR85-512BLK</b>
	<b>Rear Upper Link Outer Bush</b>	2	13	<b>PFR85-513BLK</b>
	<b>Rear Upper Link Inner Bush</b>	2	14	<b>PFR85-514BLK</b>
	<b>Rear Anti Roll Bar Bush 20.5mm</b>	2	15	<b>PFR85-515-20.5BLK</b>
	<b>Rear Anti Roll Bar Bush 20.7mm</b>	2	15	<b>PFR85-515-20.7BLK</b>
	<b>Rear Anti Roll Bar Bush 21.7mm</b>	2	15	<b>PFR85-515-21.7BLK</b>
	<b>Rear Diff Front Mounting Bush</b> <a href="#">Click for fitting instructions</a>	1	24	<b>PFR85-524BLK</b>
	<b>Rear Diff Rear Mounting Bush</b> <a href="#">Click for fitting instructions</a>	2	25	<b>PFR85-525BLK</b>

	<b>Rear Subframe Front Mounting Bush</b> <a href="#">Click for fitting instructions</a>	2	27	PFR85-527BLK
	<b>Rear Subframe Rear Mounting Bush</b> <a href="#">Click for fitting instructions</a>	2	28	PFR85-528BLK
	<b>Bump Stop Kit</b> <a href="#">Click for fitting instructions</a>	1		BS2006K