


AUDI - 80 81/85/89 90 INC AVANT (1973 - 1996)

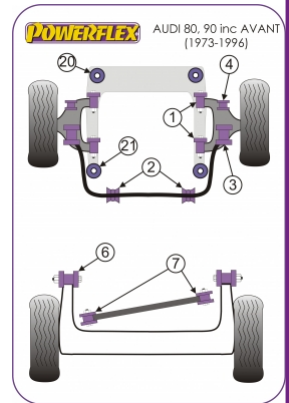

Notes

- PFF 3101 are for Pressed arms (37mm)
- PFF 3102 are for Cast arms (45mm)
- PFF 3104 & PFF 3105 These fit up to chassis number 8B-L-003-791 1994, check front shock absorber after 1991 the anti roll bar may be linked to the wishbone with a metal joint so there will be no outer anti roll bar mount.
- PFR 3110 fits up to 1992 chassis number 8A-N-200-000
- PFR 3111 fits after 1992 .
- PFR 3101121 & -23.5 Front anti roll bar mounts are tear drop shaped.
- PFF 310621.5 Fits models where there is no link rod between the anti roll bar and control arm.
- PFF 312010 & PFF 312110 fit vehicles with 10mm mounting bolts, vehicles with 12mm bolts use PFF 312012 & PFF 312112
- PFA 10012 and PFA 10014. Fits 2 bolt hub to strut models only. Check bolt diameter .

PRODUCT PRICING INFORMATION

The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

Bush Price x Qty Per Car = Pack Price

In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.











Bush description

Quantity
Per Car

Diagram
Reference

Part
Number

Retail Price
Each

| | | | | |
|---|--|---|----|----------------------|
|  | Front Wishbone Bush Click for fitting instructions | 4 | 1 | PFF 3101 |
|  | Front Wishbone Bush Click for fitting instructions | 4 | 1 | PFF 3102 |
|  | Front Anti Roll Bar Mount 22mm | 2 | 2 | PFF 310322 |
|  | Front Anti Roll Bar Mount 24mm | 2 | 2 | PFF 310324 |
|  | Front Anti Roll Bar Mount 25mm | 2 | 2 | PFF 310325 |
|  | Front Anti Roll Bar Mount 21mm | 2 | 2 | PFR 3101121 |
|  | Front Anti Roll Bar Mount 23.5mm | 2 | 2 | PFR 3101123.5 |
|  | Front Outer Roll Bar Mount Lower 16mm | 2 | 3 | PFF 3105 |
|  | Front Anti Roll Bar To Control Arm Bush | 2 | 3 | PFF 310621.5 |
|  | Front Outer Roll Bar Mount Upper | 2 | 4 | PFF 3104 |
|  | Rear Beam Front Location Bush | 2 | 6 | PFR 3110 |
|  | Rear Beam Front Location Bush | 2 | 6 | PFR 3111 |
|  | Rear Panhard Rod Bush | 2 | 7 | PFR 3109 |
|  | PowerAlign Camber Bolt Kit (12mm) Click for fitting instructions | 1 | | PFA 10012 |
|  | Front Subframe Front Bush 10mm | 2 | 20 | PFF 312010 |
|  | Front Subframe Front Bush 12mm | 2 | 20 | PFF 312012 |
|  | Front Subframe Rear Bush 10mm | 2 | 21 | PFF 312110 |
|  | Front Subframe Rear Bush 12mm | 2 | 21 | PFF 312112 |
|  | Bump Stop Kit Click for fitting instructions | 1 | | BS 2004K |