


## AUDI - A3 MK1 TYP 8L 2WD (1996-2003)

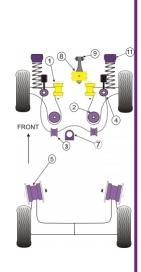



## **Notes**

• For pressed steel front wishbones use PFF 85201 & PFF 85410

For cast wishbones use PFF 85201 or PFF 3501 & PFF 3610. On cast wishbones the later cars have a larger 45mm bush, in this case please use PFF 3501. For earlier cars with a 30mm bush please use PFF 85201. PFF 85414 Is for Race use and is a rose joint type bush, it fits both pressed steel and cast wishbones

## PRODUCT PRICING INFORMATION

The prices shown on our website are <u>per bush</u>. To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

Bush Price x Qty Per Car = Pack Price

In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.

Bush description	Quantity Per Car	Diagram Reference	Part Number	Retail Price Each
 Front Wishbone Front Bush, Cast Arm, 45mm OD	2	1	PFF 3501	
Front Wishbone Front Bush	2	1	PFF 85201	
Front Wishbone Rear Bush	2	2	PFF 3610	

	Front Wishbone Rear Bush	2	2	PFF 85410	
<b>.</b>	Front Wishbone Rear Bush (Race Use)	2	2	PFF 85414	
	Front Anti Roll Bar Mount 21mm	2	3	PFF 8541121	
	Front Anti Roll Bar Mount 23mm	2	3	PFF 8541123	
	Front Anti Roll Bar Link Bush Kit	2	4	PFF 85412	
5	Rear Beam Mounting Bush	2	5	PFR 85415	
5	Steering Rack Mount Bush	1	7	PFF 85416	
Ż.	Front Engine Mount Dog Bone	1	8	PFF 85420	
Â	Front Engine Mount Dog Bone (Diesel)	1	8	PFF 85420R	
8	Front Engine Mount Dog Bone Small Bush	1	9	PFF 85505	
4	Front Strut Top Mount Bush	2	11	PFF 85430	
Ĵ	Bump Stop Kit Click for fitting instructions	1		BS 2006K	
l					