


AUDI - S3 MK1 TYP 8L 4WD (1999-2003)

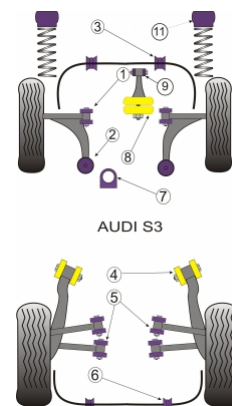

Notes

- On the front wishbones the later cars have a larger 45mm bush, in this case please use PFF 3501. For earlier cars with a 30mm bush please use PFF 85201.
- PFF 85414 is for Race use and is a rose joint type bush




PRODUCT PRICING INFORMATION

The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

Bush Price x Qty Per Car = Pack Price

In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.

Bush description	Quantity Per Car	Diagram Reference	Part Number	Retail Price Each
 Front Wishbone Front Bush, Cast Arm, 45mm OD	2	1	PFF 3501	
 Front Wishbone Front Bush	2	1	PFF 85201	
 Front Wishbone Rear Bush Click for fitting instructions	2	2	PFF 3610	

	Front Wishbone Rear Bush (Race Use) 🔗 Click for fitting instructions	2	2	PFF 85414
	Front Anti Roll Bar Mounting 17mm	2	3	PFF 350317
	Front Anti Roll Bar Mounting 19mm	2	3	PFF 350319
	Front Anti Roll Bar Mounting 20mm	2	3	PFF 350320
	Rear Wishbone Front Mounting Bush	2	4	PFR 3508
	Rear Wishbone Inner Bush	4	5	PFR 3510
	Rear Anti Roll Bar Mounting 14mm	2	6	PFR 351114
	Steering Rack Mount Bush	1	7	PFF 85416
	Front Engine Mount Dog Bone	1	8	PFF 85420
	Front Engine Mount Dog Bone (Diesel)	1	8	PFF 85420R
	Front Engine Mount Dog Bone Small Bush 🔗 Click for fitting instructions	1	9	PFF 85505
	Front Strut Top Mount Bush 🔗 Click for fitting instructions	2	11	PFF 85430