


## AUDI - TT MK1 TYP 8N 2WD (1999-2006)

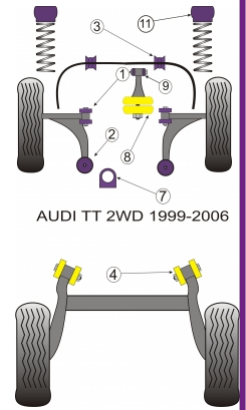

### Notes

- On the front wishbones the later cars have a larger 45mm bush, in this case please use PFF 3501.
- For earlier cars with a 30mm bush please use PFF 85201.
- PFF 85414 Is for Race use and is a rose joint type bush, it fits both pressed steel and cast wishbones.




### PRODUCT PRICING INFORMATION

The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

**Bush Price x Qty Per Car = Pack Price**

In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.

Bush description	Quantity Per Car	Diagram Reference	Part Number	Retail Price Each
 <b>Front Wishbone Front Bush, Cast Arm, 45mm OD</b>	2	1	<b>PFF 3501</b>	
 <b>Front Wishbone Front Bush</b>	2	1	<b>PFF 85201</b>	
 <b>Front Wishbone Rear Bush</b> <a href="#">Click for fitting instructions</a>	2	2	<b>PFF 3610</b>	

	<b>Front Wishbone Rear Bush (Race Use)</b> Click for fitting instructions	2	2	<b>PFF 85414</b>
	<b>Front Anti Roll Bar Mounting 17mm</b>	2	3	<b>PFF 350317</b>
	<b>Front Anti Roll Bar Mounting 19mm</b>	2	3	<b>PFF 350319</b>
	<b>Front Anti Roll Bar Mounting 20mm</b>	2	3	<b>PFF 350320</b>
	<b>Rear Beam Mounting Bush</b>	2	4	<b>PFR 85415</b>
	<b>Steering Rack Mount Bush</b>	1	7	<b>PFF 85416</b>
	<b>Front Engine Mount Dog Bone</b>	1	8	<b>PFF 85420</b>
	<b>Front Engine Mount Dog Bone (Diesel)</b>	1	8	<b>PFF 85420R</b>
	<b>Front Engine Mount Dog Bone Small Bush</b> Click for fitting instructions	1	9	<b>PFF 85505</b>
	<b>Front Strut Top Mount Bush</b> Click for fitting instructions	2	11	<b>PFF 85430</b>