



80, 90 QUATTRO INC AVANT (1983-1992) S2 CC (1991-1996)

The prices shown on our website are per bush.


To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

Bush Price x Qty Per Car = Pack Price

Notes

- PFF 3101 Fits 37mm Pressed Front Arms
- **PFF 3102 Fits 45mm Cast Front Arms**
- PFF 3104 & PFF 3105 Only Fit Up To 1992 Chassis Number 8A-N-200-000
- PFF 310621.5 Fits models where there is no link rod between the anti roll bar and control arm.
- PFR 3101121/23.5/25 Front anti roll bar mounts are tear drop shaped
- PFF 312010 & PFF 312110 fit vehicles with 10mm mounting bolts, vehicles with 12mm bolts use PFF 312012 & PFF 312112

In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.

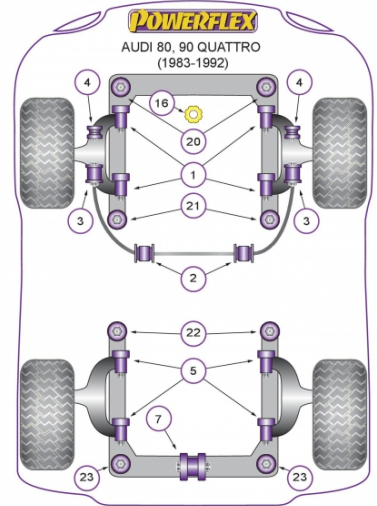

FRONT WISHBONE BUSH

Qty Per Car **4**

Diagram Ref. **1**

Part No. **PFF 3101**



FRONT WISHBONE BUSH

Qty Per Car **4**

Diagram Ref. **1**

Part No. **PFF 3102**



FRONT ANTI ROLL BAR MOUNT 24MM

Qty Per Car **2**

Diagram Ref. **2**

Part No. **PFF 310324**



FRONT ANTI ROLL BAR MOUNT 25MM

Qty Per Car **2**

Diagram Ref. **2**

Part No. **PFF 310325**



FRONT ANTI ROLL BAR MOUNT 21MM

Qty Per Car **2**

Diagram Ref. **2**

Part No. **PFR 3101121**



FRONT ANTI ROLL BAR MOUNT 23.5MM

Qty Per Car **2**

Diagram Ref. **2**

Part No. **PFR 3101123.5**



FRONT ANTI ROLL BAR MOUNT 25MM

Qty Per Car 2

Diagram Ref. 2

Part No. **PFR 3101125**



FRONT OUTER ROLL BAR MOUNT LOWER 16MM

Qty Per Car 2

Diagram Ref. 3

Part No. **PFF 3105**



FRONT OUTER ROLL BAR MOUNT LOWER 12MM

Qty Per Car 2

Diagram Ref. 3

Part No. **PFF 310512**



FRONT ANTI ROLL BAR TO CONTROL ARM BUSH

Qty Per Car 2

Diagram Ref. 3

Part No. **PFF 310621.5**



FRONT OUTER ROLL BAR MOUNT UPPER

Qty Per Car 2

Diagram Ref. 4

Part No. **PFF 3104**



REAR WISHBONE BUSH

Qty Per Car 4

Diagram Ref. 5

Part No. **PFF 3101**



REAR DIFFERENTIAL MOUNT

Qty Per Car 1

Diagram Ref. 7

Part No. **PFR 3107**



FRONT SUBFRAME FRONT BUSH 10MM

Qty Per Car 2

Diagram Ref. 20

Part No. **PFF 312010**



FRONT SUBFRAME FRONT BUSH 12MM

Qty Per Car 2

Diagram Ref. 20

Part No. **PFF 312012**



FRONT SUBFRAME REAR BUSH 10MM

Qty Per Car 2

Diagram Ref. 21

Part No. **PFF 312110**



FRONT SUBFRAME REAR BUSH 12MM

Qty Per Car 2

Diagram Ref. 21

Part No. **PFF 312112**



REAR SUBFRAME FRONT BUSH 10MM

Qty Per Car 2

Diagram Ref. 22

Part No. **PFF 312110**



REAR SUBFRAME FRONT BUSH 12MM

Qty Per Car **2**

Diagram Ref. **22**

Part No. **PFF 312112**



REAR SUBFRAME REAR BUSH 10MM

Qty Per Car **2**

Diagram Ref. **23**

Part No. **PFF 312010**



REAR SUBFRAME REAR BUSH 12MM

Qty Per Car **2**

Diagram Ref. **23**

Part No. **PFF 312012**



ENGINE SNUB NOSE MOUNT

Qty Per Car **1**

Diagram Ref. **16**

Part No. **PFF 3220**
