


## ALFA ROMEO - 147 (00-10), 156 (97-07), GT (03-10)

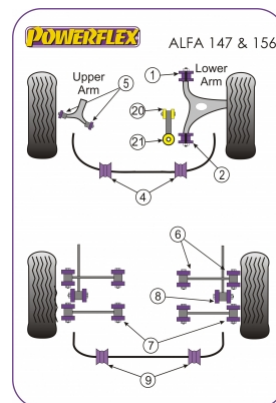

### Notes

- PFF 1811 and PFF 1812 are designed to fit genuine Alfa control arms. If non genuine arms are fitted, the pin diameter at the back of the arm may be different. If this is the case, please contact your Powerflex distributor first.
- PFF 1813 Engine Mount Kit fits V6 models only.
- PFF 1820 Fits 1.6 to 2.0 petrol engines.
- PFF 1821 Fits 1.6 and 1.8 Twin Spark models with an extruded bracket.
- PFF 1822 Fits 2.0 twin Spark & JTS models with welded steel bracket.





### PRODUCT PRICING INFORMATION











The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

**Bush Price x Qty Per Car = Pack Price**

In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.

Bush description	Quantity Per Car	Diagram Reference	Part Number	Retail Price Each
 <b>Front Lower Wishbone Front Bush</b>  Click for fitting instructions	2	1	<b>PFF 1811</b>	
 <b>Front Lower Wishbone Rear Bush</b>  Click for fitting instructions	2	2	<b>PFF 1812</b>	

	<b>Front Anti Roll Bar Bush 22mm</b>	<b>2</b>	<b>4</b>	<b>PFF 181022</b>
	<b>Front Anti Roll Bar Bush 23mm</b>	<b>2</b>	<b>4</b>	<b>PFF 181023</b>
	<b>Front Anti Roll Bar Bush 26mm</b>	<b>2</b>	<b>4</b>	<b>PFF 181026</b>
	<b>Front Upper Arm Bush</b> 🔑 Click for fitting instructions	<b>4</b>	<b>5</b>	<b>PFF 1815</b>
	<b>Rear Suspension Front Arm Bush</b>	<b>4</b>	<b>6</b>	<b>PFR 1816</b>
	<b>Rear Suspension Rear Arm Bush</b>	<b>4</b>	<b>7</b>	<b>PFR 1817</b>
	<b>Rear Tie Bar to Hub Bush</b>	<b>2</b>	<b>8</b>	<b>PFR 1818</b>
	<b>Rear Anti Roll Bar Bush 14mm</b>	<b>2</b>	<b>9</b>	<b>PFR 181914</b>
	<b>Rear Anti Roll Bar Bush 16mm</b>	<b>2</b>	<b>9</b>	<b>PFR 181916</b>
	<b>Engine Mount Stabiliser Bush *V6 Only*</b>	<b>2</b>		<b>PFF 1813</b>
	<b>Engine Mount Engine To Stabilizer Bush</b>	<b>1</b>	<b>20</b>	<b>PFF 1820</b>
	<b>Engine Mount Stabilizer To Chassis Bush</b> 🔑 Click for fitting instructions	<b>1</b>	<b>21</b>	<b>PFF 1821</b>
	<b>Engine Mount Stabilizer To Chassis Bush</b>	<b>1</b>	<b>21</b>	<b>PFF 1822</b>