


## BMW - E39 5 SERIES (1996 - 2004) - E39 5 SERIES 520 TO 530 TOURING

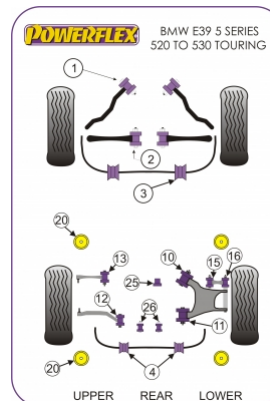

### Notes

- PFF 5460223/24/25/27 front anti roll bar bush is fitted on models with M Sport II suspension, please click on image and compare to original.
- PFF 5503225/24/25/27 front anti roll bar bush fit non M sport suspension models, please click on image and compare to original.
- Use either PFR 5530 complete bushes or PFR 5531 inserts.
- Use either PFR 5524 for diffs with a flat mounting face or PFR 5525 if the casing has a spigot.


### PRODUCT PRICING INFORMATION























The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

**Bush Price x Qty Per Car = Pack Price**

In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.

Bush description	Quantity Per Car	Diagram Reference	Part Number	Retail Price Each
 <b>Front Lower Tie Bar To Chassis Bush</b>	<b>2</b>	<b>1</b>	<b>PFF 5510</b>	

	<b>Front Inner Track Control Arm Bush</b>	2	2	<b>PFF 5511</b>
	<b>Front Anti Roll Bar Bush 23mm</b>	2	3	<b>PFF 5460223</b>
	<b>Front Anti Roll Bar Bush 24mm</b>	2	3	<b>PFF 5460224</b>
	<b>Front Anti Roll Bar Bush 25mm</b>	2	3	<b>PFF 5460225</b>
	<b>Front Anti Roll Bar Mounting Bush 27mm</b>	2	3	<b>PFF 5460227</b>
	<b>Front Anti Roll Bar Mounting Bush 22.5mm</b>	2	3	<b>PFF 5503225</b>
	<b>Front Anti Roll Bar Mounting Bush 24mm</b>	2	3	<b>PFF 550324</b>
	<b>Front Anti Roll Bar Mounting Bush 25mm</b>	2	3	<b>PFF 550325</b>
	<b>Front Anti Roll Bar Mounting Bush 27mm</b>	2	3	<b>PFF 550327</b>
	<b>Rear Anti Roll Bar Mounting Bush 13mm</b>	2	4	<b>PFR 550413</b>
	<b>Rear Anti Roll Bar Mounting Bush 14mm</b>	2	4	<b>PFR 550414</b>
	<b>Rear Roll Bar Mounting Bush 15mm</b>	2	4	<b>PFR 550415</b>
	<b>Rear Roll Bar Mounting Bush 16.5mm</b>	2	4	<b>PFR 5504165</b>
	<b>Rear Lower Arm Front Bush</b>	2	10	<b>PFR 571010</b>
	<b>Rear Lower Arm Rear Bush</b>	2	11	<b>PFR 5711</b>
	<b>Rear Lower Arm Rear Bush</b>	2	11	<b>PFR 571112</b>
	<b>Rear Upper Arm Inner Bush</b> 🔑 Click for fitting instructions	2	12	<b>PFR 5712</b>
	<b>Rear Toe Adjust Inner Bush</b>	2	13	<b>PFR 5713</b>
	<b>Rear Outer Integral Link Upper Bush</b> 🔑 Click for fitting instructions	2	15	<b>PFR 5715</b>
	<b>Rear Outer Integral Link Lower Bush</b> 🔑 Click for fitting instructions	2	16	<b>PFR 5716</b>
	<b>Rear Subframe Mounting Bush</b> 🔑 Click for fitting instructions	4	20	<b>PFR 5530</b>
	<b>Rear Subframe Mounting Bush Insert</b>	4	20	<b>PFR 5531</b>

**Rear Diff Front Mounting Bush**[Click for fitting instructions](#)**1****25****PFR 5524****Rear Diff Front Mounting Bush**[Click for fitting instructions](#)**1****25****PFR 5525****Rear Diff Rear Mounting Bush**[Click for fitting instructions](#)**2****26****PFR 5526****Bump Stop Kit**[Click for fitting instructions](#)**1****BS 2003K**