


BMW - E39 5 SERIES (1996 - 2004) - E39 5 SERIES 520 TO 530

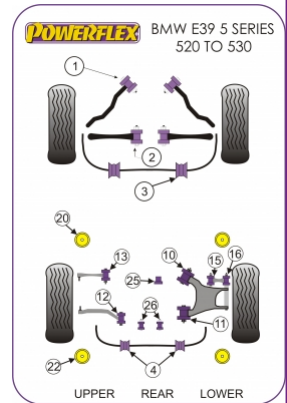

Notes

- PFF 5460223/24/25/27 front anti roll bar bush is fitted on models with M Sport II suspension, please click on image and compare to original.
- PFF 5503225/24/25/27 front anti roll bar bush fit non M sport suspension models, please click on image and compare to original.
- Use either PFR 5520 and PFR 5522 complete bushes (Saloon models only) or PFR 5521 and PFR 5523 inserts.
- PFR 5520 and PFR 5522 fits Saloon models only.
- PFR 5711 fits M5 and Touring models only, for saloon models use PFR 571112.


PRODUCT PRICING INFORMATION























The prices shown on our website are per bush.







To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

Bush Price x Qty Per Car = Pack Price

In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.

Bush description	Quantity Per Car	Diagram Reference	Part Number	Retail Price Each
 Front Lower Tie Bar To Chassis Bush	2	1	PFF 5510	

	Front Inner Track Control Arm Bush	2	2	PFF 5511
	Front Anti Roll Bar Bush 23mm	2	3	PFF 5460223
	Front Anti Roll Bar Bush 24mm	2	3	PFF 5460224
	Front Anti Roll Bar Bush 25mm	2	3	PFF 5460225
	Front Anti Roll Bar Mounting Bush 27mm	2	3	PFF 5460227
	Front Anti Roll Bar Mounting Bush 22.5mm	2	3	PFF 5503225
	Front Anti Roll Bar Mounting Bush 24mm	2	3	PFF 550324
	Front Anti Roll Bar Mounting Bush 25mm	2	3	PFF 550325
	Front Anti Roll Bar Mounting Bush 27mm	2	3	PFF 550327
	Rear Anti Roll Bar Mounting Bush 13mm	2	4	PFR 550413
	Rear Anti Roll Bar Mounting Bush 14mm	2	4	PFR 550414
	Rear Roll Bar Mounting Bush 15mm	2	4	PFR 550415
	Rear Roll Bar Mounting Bush 16.5mm	2	4	PFR 5504165
	Rear Lower Arm Front Bush	2	10	PFR 571010
	Rear Lower Arm Rear Bush	2	11	PFR 5711
	Rear Lower Arm Rear Bush	2	11	PFR 571112
	Rear Upper Arm Inner Bush 🔗 Click for fitting instructions	2	12	PFR 5712
	Rear Toe Adjust Inner Bush	2	13	PFR 5713
	Rear Outer Integral Link Upper Bush 🔗 Click for fitting instructions	2	15	PFR 5715
	Rear Outer Integral Link Lower Bush 🔗 Click for fitting instructions	2	16	PFR 5716
	Rear Subframe Front Mounting Bush 🔗 Click for fitting instructions	2	20	PFR 5520
	Rear Subframe Mounting Front Insert	2	20	PFR 5521

	Rear Subframe Rear Mounting Bush Click for fitting instructions	2	22	PFR 5522
	Rear Subframe Rear Mounting Insert	2	22	PFR 5523
	Rear Diff Front Mounting Bush Click for fitting instructions	1	25	PFR 5524
	Rear Diff Front Mounting Bush Click for fitting instructions	1	25	PFR 5525
	Rear Diff Rear Mounting Bush Click for fitting instructions	2	26	PFR 5526
	Bump Stop Kit Click for fitting instructions	1		BS 2003K