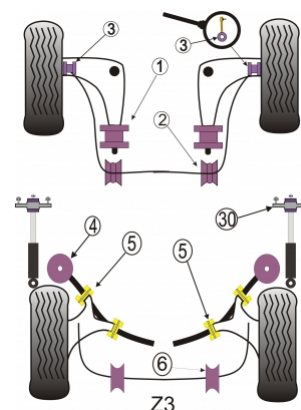


BMW - Z3 (1994 - 2002)



Notes

- PFF 5303 is an eccentric bush for the M Series or where increased caster is required.
- Please check front and rear anti roll bar size before ordering.
- PFF 5304 is designed to fit models where the Anti Roll Bar joins the lower arm not the shock absorber. The will not fit the M! versions as a consequence.
- For the rear trailing arm use either PFR5-309 or on-car adjustable bushes PFR 5306G
- **PFR 5563010 fits cars with standard or aftermarket rear shock absorber with a 10mm pin, PFR 5563012 fits cars with aftermarket rear shock absorbers with a 12mm pin.**


PRODUCT PRICING INFORMATION




















The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

Bush Price x Qty Per Car = Pack Price

In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.

Bush description	Quantity Per Car	Diagram Reference	Part Number	Retail Price Each
 Front Lower Wishbone Rear Bush Click for fitting instructions	2	1	PFF 5301	

	Front Lower Wishbone Rear Bush Eccentric Click for fitting instructions	2	1	PFF 5303
	Front Anti Roll Bar Mounting 23mm	2	2	PFF 531023
	Front Anti Roll Bar Mounting 24mm	2	2	PFF 531024
	Front Anti Roll Bar Mounting 25mm	2	2	PFF 531025
	Front Anti Roll Bar Mounting 26mm	2	2	PFF 531026
	Front Anti Roll Bar Mounting 27mm	2	2	PFF 531027
	Front Anti Roll Bar Mounting 28mm	2	2	PFF 531028
	Anti Roll Bar Link Rod Bush	2	3	PFF 5304
	Rear Beam Bush	2	4	PFR 5311
	Rear Trailing Arm Bush Adjustable Click for fitting instructions	4	5	PFR 5306G
	Rear Trailing Arm Bush	4	5	PFR 5309
	Rear Anti Roll Bar Bush 14mm	2	6	PFR 550414
	Rear Roll Bar Mounting Bush 15mm	2	6	PFR 550415
	Rear Anti Roll Bar Bush 16mm	2	6	PFR 550416
	Rear Anti Roll Bar Bush 17mm	2	6	PFR 550417
	Rear Anti Roll Bar Bush 18mm	2	6	PFR 550418
	Rear Diff Mounting Bush	1	7	PFR 5300
	Rear Shock Top Mount Bracket and Bush 10mm Click for fitting instructions	2	30	PFR 5563010
	Rear Shock Top Mount Bracket and Bush 12mm Click for fitting instructions	2	30	PFR 5563012