


BMW - Z4 (E85 & E86)

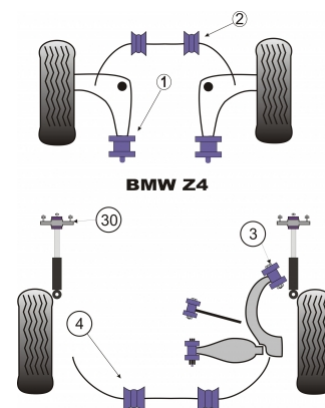

Notes:

PFR 5563010 fits cars with standard or aftermarket rear shock absorber with a 10mm pin, PFR 5563012 fits cars with aftermarket rear shock absorbers with a 12mm pin.

Product Pricing Information The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle. **Bush Price x Qty Per Car = Pack Price** In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.

Bush description	Quantity Per Car	Diagram Reference	Part Number	Retail Price Each
 Front Wishbone Rear Bush Click for fitting instructions	2	1	PFF 54601	
 Front Wishbone Rear Bush Click for fitting instructions	2	1	PFF 5460160	
 Front Wishbone Rear Bush, Aluminium Outer Click for fitting instructions	2	1	PFF 5560160	
 Front Wishbone Rear Bush, Aluminium Outer Click for fitting instructions	2	1	PFF 55601	
 Front Anti Roll Bar Bush 24mm	2	2	PFF 5460224	
 Front Anti Roll Bar Bush 25mm	2	2	PFF 5460225	

	Front Anti Roll Bar Mounting Bush 27mm	2	2	PFF 5460227	
	Rear Trailing Arm Bush	2	3	PFR 53608	
	Rear Roll Bar Mounting Bush 22.5mm	2	4	PFR 5460922.5	
	Rear Roll Bar Mounting Bush	2	4	PFR 550418	
	Rear Roll Bar Mounting Bush	2	4	PFR 550419	
	Rear Subframe Rear Bush  Click for fitting instructions	2	11	PFR 54611	
	Rear Shock Top Mount Bracket and Bush 10mm  Click for fitting instructions	2	30	PFR 5563010	
	Rear Shock Top Mount Bracket and Bush 12mm  Click for fitting instructions	2	30	PFR 5563012	