


BMW - 1502-2002 (1962 - 1977)

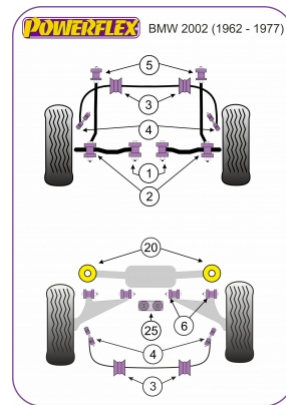

Notes

- PFF 5200315 and PFF 5200316 anti-roll bar bushes fit both front and rear.
- PFF 52004 anti-roll bar link rod bush fits both the front and rear.
- PFR 52020 are inserts which fit into the voids of the original rear beam bush.
- PFR 52021 is a complete bush for the rear beam mount.
- Please check Anti-roll bar diameter before ordering.


PRODUCT PRICING INFORMATION














The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

Bush Price x Qty Per Car = Pack Price

In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.

Bush description	Quantity Per Car	Diagram Reference	Part Number
 Front Lower Arm Inner Bush	2	1	PFF 52001

	Front Lower Arm Outer Bush	2	2	PFF 52002
	Front Anti Roll Bar Bush 15mm	2	3	PFF 5200315
	Rear Anti Roll Bar Bush 15mm	2	3	PFF 5200315
	Front Anti Roll Bar Bush 16mm	2	3	PFF 5200316
	Rear Anti Roll Bar Bush 16mm	2	3	PFF 5200316
	Front Anti Roll Bar Link Rod Bush	2	4	PFF 52004
	Rear Anti Roll Bar Link Rod Bush	2	4	PFF 52004
	Tie Bar To Chassis Front Bush 🔗 Click for fitting instructions	2	5	PFF 52005
	Rear Trailing Arm Bush	4	6	PFR 5306
	Rear Trailing Arm Bush Adjustable 🔗 Click for fitting instructions	4	6	PFR 5306G
	Rear Beam Mount Bush Inserts 🔗 Click for fitting instructions	2	20	PFR 52020
	Rear Beam Mount Bush 🔗 Click for fitting instructions	2	20	PFR 52021
	Rear Diff Rear Mounting Bush	2	25	PFR 52025