




E36 3 SERIES (1990 - 1998)

The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

Bush Price x Qty Per Car = Pack Price

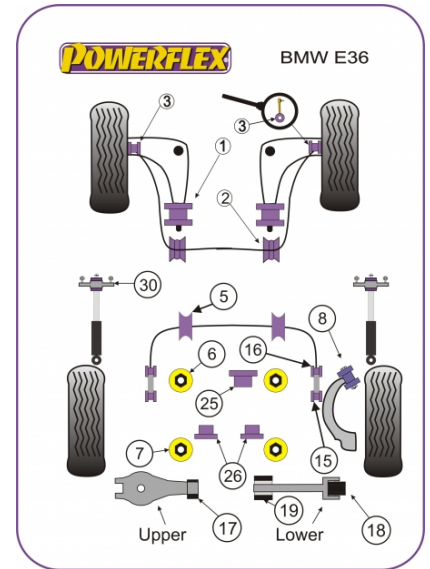

Notes

- PFF 5303 is an eccentric bush for the M3 (non-Evo) or where increased castor is required
- PFF 5301 is an concentric bush for non M3 models
- Please check front and rear roll bar size before ordering.
- PFF 5304 is designed to fit models where the Anti Roll Bar joins the lower arm not the shock absorber. This part will not fit the M' versions as a consequence.
- PFR 5563010 fits cars with standard or aftermarket rear shock absorber with a 10mm pin, PFR 5563012 fits cars with aftermarket rear shock absorbers with a 12mm pin. Neither fit Cabriolet models
- PFR 5324 fits later M3 Evo models where the bush fits into a separate mounting bracket
- PFR 5325 fits all models, (M3 models up to 1996) with the bush in the subframe
- PFR 5326 fits all models including all M3 models
- PFR 54615G replaces the original arm and inner bush and allows on car adjustment of camber. For a replacement bush only to fit in the original arm, please use PFR 54616.

In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.



POWERFLEX HANDLING PACK

Qty Per Car **1**

Diagram Ref.

Part No. **PF5K-1002**



FRONT LOWER WISHBONE REAR BUSH

Qty Per Car **2**

Diagram Ref. **1**

Part No. **PF5 5301**



FRONT LOWER WISHBONE REAR BUSH CASTER OFFSET

Qty Per Car **2**

Diagram Ref. **1**

Part No. **PFF 5303**



FRONT ANTI ROLL BAR MOUNTING 23MM

Qty Per Car **2**

Diagram Ref. **2**

Part No. **PFF 531023**



FRONT ANTI ROLL BAR MOUNTING 24MM

Qty Per Car **2**

Diagram Ref. **2**

Part No. **PFF 531024**



FRONT ANTI ROLL BAR MOUNTING 25MM

Qty Per Car **2**

Diagram Ref. **2**

Part No. **PFF 531025**



FRONT ANTI ROLL BAR MOUNTING 26MM

Qty Per Car **2**

Diagram Ref. **2**

Part No. **PFF 531026**



FRONT ANTI ROLL BAR MOUNTING 27MM

Qty Per Car **2**

Diagram Ref. **2**

Part No. **PFF 531027**



FRONT ANTI ROLL BAR MOUNTING 28MM

Qty Per Car **2**

Diagram Ref. **2**

Part No. **PFF 531028**



ANTI ROLL BAR LINK ROD BUSH

Qty Per Car **2**

Diagram Ref. **3**

Part No. **PFF 5304**



REAR ROLL BAR MOUNTING BUSH 15MM

Qty Per Car **2**

Diagram Ref. **5**

Part No. **PFR 550415**



REAR ROLL BAR MOUNTING BUSH 18MM

Qty Per Car **2**

Diagram Ref. **5**

Part No. **PFR 550418**



REAR ROLL BAR MOUNTING BUSH 19MM

Qty Per Car **2**

Diagram Ref. **5**

Part No. **PFR 550419**



REAR ROLL BAR MOUNTING BUSH 20MM

Qty Per Car **2**

Diagram Ref. **5**

Part No. **PFR 550420**



REAR SUBFRAME FRONT MOUNTING BUSH

Qty Per Car **2**

Diagram Ref. **6**

Part No. **PFR 53607**



REAR SUBFRAME FRONT MOUNTING BUSH INSERT

Qty Per Car **2**

Diagram Ref. **6**

Part No. **PFR 53617**



REAR SUBFRAME REAR MOUNTING BUSH

Qty Per Car **2**

Diagram Ref. **7**

Part No. **PFR 53606**



REAR SUBFRAME REAR MOUNTING BUSH INSERT

Qty Per Car **2**

Diagram Ref. **7**

Part No. **PFR 53616**



REAR TRAILING ARM FRONT BUSH

Qty Per Car **2**

Diagram Ref. **8**

Part No. **PFR 53608**



REAR ANTI ROLL BAR LINK TO ARM BUSH

Qty Per Car **2**

Diagram Ref. **15**

Part No. **PFR 5315**



REAR ANTI ROLL BAR LINK TO ANTI ROLL BAR BUSH

Qty Per Car **2**

Diagram Ref. **16**

Part No. **PFR 5316**



REAR UPPER ARM INNER BUSH

Qty Per Car **2**

Diagram Ref. **17**

Part No. **PFR 54617**



REAR LOWER ARM OUTER BUSH

Qty Per Car **2**

Diagram Ref. **18**

Part No. **PFR 54618**



ADJUSTABLE REAR LOWER CONTROL ARM KIT

Qty Per Car **1**

Diagram Ref. **19**

Part No. **PFR 54615G**



REAR LOWER CONTROL ARM INNER BUSH

Qty Per Car **2**

Diagram Ref. **19**

Part No. **PFR 54616**



REAR DIFF FRONT MOUNTING BUSH, M3 EVO ONLY

Qty Per Car **1**

Diagram Ref. **25**

Part No. **PFR 5324**



REAR DIFF FRONT MOUNTING BUSH

Qty Per Car **1**

Diagram Ref. **25**

Part No. **PFR 5325**



REAR DIFF REAR MOUNTING BUSH

Qty Per Car **2**

Diagram Ref. **26**

Part No. **PFR 5326**



REAR SHOCK TOP MOUNT BRACKET AND BUSH 10MM

Qty Per Car **2**

Diagram Ref. **30**

Part No. **PFR 5563010**



REAR SHOCK TOP MOUNT BRACKET AND BUSH 12MM

Qty Per Car **2**

Diagram Ref. **30**

Part No. **PFR 5563012**



BUMP STOP KIT

Qty Per Car **1**

Diagram Ref.

Part No. **BS 2003K**
