

E36 3 SERIES COMPACT

PRICING INFORMATION


The prices shown on our website are <u>per bush</u>. To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

Bush Price x Qty Per Car = Pack Price

<u>Notes</u>

- PFF 5303 is an eccentric bush for the M3 or where increased caster is required.
- Please check front and rear anti roll bar size before ordering.
- PFF 5304 is designed to fit models where the Anti Roll Bar joins lower arm not the shock absorber.
- For the rear trailing arm use either PFR5-306 or on-car adjustable bushes PFR 5306G.
- PFR 5563010 fits cars with standard or aftermarket rear shock absorber with a 10mm pin, PFR 5563012 fits cars with aftermarket rear shock absorbers with a 12mm pin.

In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.

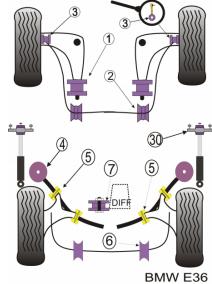


BMW E36 Compact

100	ĩ,
-	
	8
10.00	

FRONT LOWER WISHBONE REAR BUSH

Qty Per Car 2	Diagram Ref. 1

Part	No.	PFF	5301

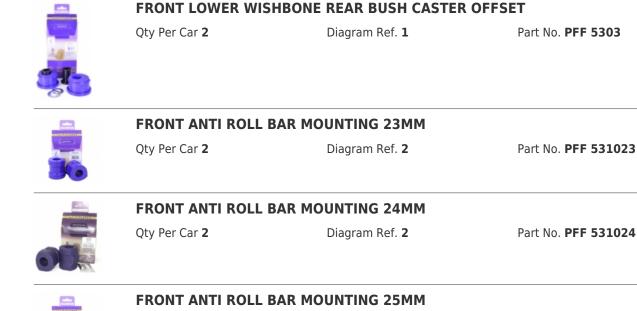



Qty Per Car 2 Diagram Ref. 2

FRONT ANTI ROLL BAR MOUNTING 26MM



Diagram Ref. **2**

Part No. PFF 531026

Part No. PFF 531025

		AR MOUNTING 27MM	
	Qty Per Car 2	Diagram Ref. 2	Part No. PFF 531027
	FRONT ANTI ROLL B	AR MOUNTING 28MM	
	Qty Per Car 2	Diagram Ref. 2	Part No. PFF 531028
s* 📃	ANTI ROLL BAR LIN	ROD BUSH	
	Qty Per Car 2	Diagram Ref. 3	Part No. PFF 5304
	REAR BEAM BUSH		
	Qty Per Car 2	Diagram Ref. 4	Part No. PFR 5311
	REAR TRAILING ARM	I BUSH	
	Qty Per Car 4	Diagram Ref. 5	Part No. PFR 5306
	REAR TRAILING ARM	I BUSH ADJUSTABLE	
	Qty Per Car 4	Diagram Ref. 5	Part No. PFR 5306G
	REAR ROLL BAR MO	UNTING BUSH 12MM	
	Qty Per Car 2	Diagram Ref. 6	Part No. PFR 530812
	REAR ROLL BAR MO	UNTING BUSH 14MM	
	Qty Per Car 2	Diagram Ref. 6	Part No. PFR 530814
	REAR ROLL BAR MO	UNTING BUSH 16MM	
	Qty Per Car 2	Diagram Ref. 6	Part No. PFR 530816



Qty Per Car **1**

Diagram Ref. **7**

Part No. **PFR 5300**

REAR SHOCK TOP MOUNT BRACKET AND BUSH 10MM				
Qty Per Car 2	Diagram Ref. 30	Part No. PFR 5563010		
REAR SHOCK TOP N	IOUNT BRACKET AND BUSH	1 12MM		
Qty Per Car 2	Diagram Ref. 30	Part No. PFR 5563012		
BUMP STOP KIT				
Qty Per Car 1	Diagram Ref.	Part No. BS 2003K		