



BMW E90, E91, E92 & E93 3 SERIES XDRIVE (2005-2013)


E90, E91, E92 & E93 3 SERIES XDRIVE (2005-2013)

The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

Bush Price x Qty Per Car = Pack Price

In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.

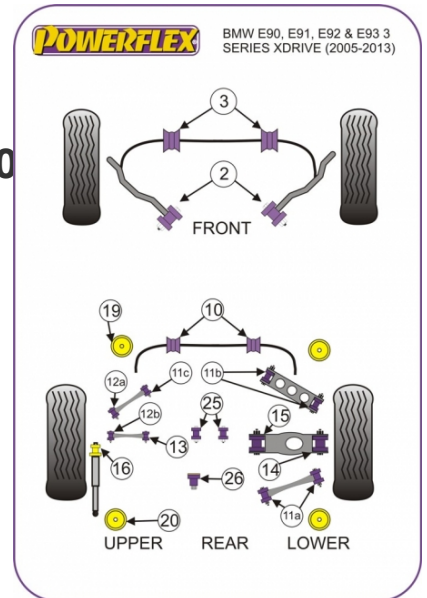

FRONT CONTROL ARM TO CHASSIS BUSH

Qty Per Car 2

Diagram Ref. 2

Part No. **PFF 55701**



FRONT ANTI ROLL BAR MOUNTING BUSH 26.5MM

Qty Per Car 2

Diagram Ref. 3

Part No. **PFF 5570326.5**



REAR ANTI ROLL BAR MOUNTING BUSH 11MM

Qty Per Car 2

Diagram Ref. 10

Part No. **PFR 5460911**



REAR ANTI ROLL BAR MOUNTING BUSH 12MM

Qty Per Car 2

Diagram Ref. 10

Part No. **PFR 5460912**



REAR ANTI ROLL BAR MOUNTING BUSH 13MM

Qty Per Car 2

Diagram Ref. 10

Part No. **PFR 5460913**



REAR ANTI ROLL BAR MOUNTING BUSH 14MM

Qty Per Car 2

Diagram Ref. 10

Part No. **PFR 5460914**



REAR ANTI ROLL BAR MOUNTING BUSH 15MM

Qty Per Car 2

Diagram Ref. 10

Part No. **PFR 5460915**



REAR TOE ADJUST ARM INNER & OUTER BUSH

Qty Per Car **4**

Diagram Ref. **11a**

Part No. **PFR 5411**



REAR TRAILING ARM INNER & OUTER BUSH

Qty Per Car **4**

Diagram Ref. **11b**

Part No. **PFR 5411**



REAR UPPER CONTROL ARM TO CHASSIS BUSH

Qty Per Car **2**

Diagram Ref. **11c**

Part No. **PFR 5411**



REAR UPPER CONTROL ARM TO HUB BUSH

Qty Per Car **2**

Diagram Ref. **12a**

Part No. **PFR 5412**



REAR UPPER LATERAL ARM TO HUB BUSH

Qty Per Car **2**

Diagram Ref. **12b**

Part No. **PFR 5412**



REAR UPPER LATERAL ARM TO CHASSIS BUSH

Qty Per Car **2**

Diagram Ref. **13**

Part No. **PFR 5413**



REAR LOWER LATERAL ARM TO HUB BUSH

Qty Per Car **2**

Diagram Ref. **14**

Part No. **PFR 5414**



REAR LOWER LATERAL ARM TO CHASSIS BUSH

Qty Per Car **2**

Diagram Ref. **15**

Part No. **PFR 5415**



REAR SHOCK ABSORBER UPPER MOUNTING BUSH

Qty Per Car **2**

Diagram Ref. **16**

Part No. **PFR 5416**



REAR SHOCK ABSORBER UPPER MOUNTING BUSH 12MM

Qty Per Car **2**

Diagram Ref. **16**

Part No. **PFR 541612**



REAR SUBFRAME FRONT MOUNT INSERT

Qty Per Car **2**

Diagram Ref. **19**

Part No. **PFR 5419**



REAR SUBFRAME FRONT MOUNTING BUSH

Qty Per Car **2**

Diagram Ref. **19**

Part No. **PFR 5420**



REAR SUBFRAME, FRONT BUSH

Qty Per Car **2**

Diagram Ref. **19**

Part No. **PFR 51220**



REAR SUBFRAME REAR MOUNTING INSERT

Qty Per Car **2**

Diagram Ref. **20**

Part No. **PFR 5421**



REAR SUBFRAME REAR MOUNTING BUSH

Qty Per Car **2**

Diagram Ref. **20**

Part No. **PFR 5422**



REAR SUBFRAME REAR MOUNTING INSERT

Qty Per Car **2**

Diagram Ref. **20**

Part No. **PFR 5423**



REAR DIFF FRONT MOUNTING BUSH

Qty Per Car **2**

Diagram Ref. **25**

Part No. **PFR 5425**



REAR DIFF REAR MOUNTING BUSH

Qty Per Car **1**

Diagram Ref. **26**

Part No. **PFR 5426**
