


CATERHAM - 7 (DEDION WITHOUT WATTS LINKAGE)

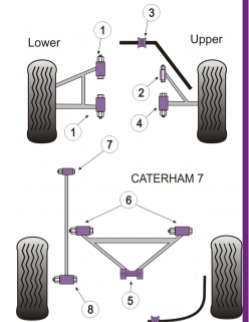

Notes

- Drawing reference no.5, Vehicles to 1996 use PF 8903, Vehicles after 1996 use PF 8907





PRODUCT PRICING INFORMATION









The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

Bush Price x Qty Per Car = Pack Price

In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.

Bush description	Quantity Per Car	Diagram Reference	Part Number	Retail Price Each
 Large Lower Wishbone Bush 1/2" Bore	4	1	PF 8901	
 Small Upper Wishbone Front Bush	2	2	PF 8902	
 Front Anti Roll Bar Bush 12.5mm	2	3	PF 890512.5	
 Front Anti Roll Bar Bush 14.5mm	2	3	PF 890514.5	

	Front Anti Roll Bar Bush 16mm	2	3	PF 890516
	Front Anti Roll Bar Bush 19mm	2	3	PF 890519
	Large Upper Wishbone Rear Bush	2	4	PF 8904
	DeDion "A" Frame Centre Bush	1	5	PF 8903
	DeDion "A" Frame Centre Bush	1	5	PF 8907
	DeDion "A" Frame Mounting Bush	2	6	PF 8901
	Rear Axle Trailing Arm Front Bush	2	7	PF 8909
	Rear Axle Link Rear Bush 1/2" Bore	2	8	PF 8901