



## 500 (2007-)

The prices shown on our website are per bush.


To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

**Bush Price x Qty Per Car = Pack Price**

Notes

- PFF 16521 does not fit US models
- PFF 16522 and PFF 16523 fit US models only (including Abarth) check insert shape for correct fitment

*In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.*

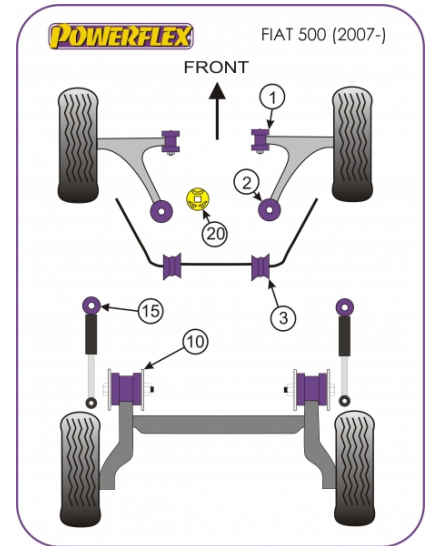

### POWERALIGN CAMBER BOLT KIT (10MM)

Qty Per Car **1**

Diagram Ref. **N/A**

Part No. **PFA100-10**



### FRONT ARM FRONT BUSH

Qty Per Car **2**

Diagram Ref. **1**

Part No. **PFF 16501**



### FRONT ARM REAR BUSH

Qty Per Car **2**

Diagram Ref. **2**

Part No. **PFF 16502**



### FRONT ANTI ROLL BAR BUSH 20MM

Qty Per Car **2**

Diagram Ref. **3**

Part No. **PFF 1650320**



### FRONT ANTI ROLL BAR BUSH 21MM

Qty Per Car **2**

Diagram Ref. **3**

Part No. **PFF 1650321**



### REAR BEAM MOUNTING BUSH

Qty Per Car **2**

Diagram Ref. **10**

Part No. **PFR 16510**



### REAR SHOCK ABSORBER TOP MOUNTING BUSH

Qty Per Car **2**

Diagram Ref. **15**

Part No. **PFR 16515**

---



### LOWER ENGINE MOUNT INSERT

Qty Per Car **1**

Diagram Ref. **20**

Part No. **PFF 16520**

---



### LOWER ENGINE MOUNT INSERT, ABARTH

Qty Per Car **1**

Diagram Ref. **20**

Part No. **PFF 16521**

---



### LOWER ENGINE MOUNT INSERT - US MODELS

Qty Per Car **1**

Diagram Ref. **20**

Part No. **PFF 16522**

---



### LOWER ENGINE MOUNT INSERT - US MODELS

Qty Per Car **1**

Diagram Ref. **20**

Part No. **PFF 16523**

---