


## LANCIA - INTEGRALE 16V

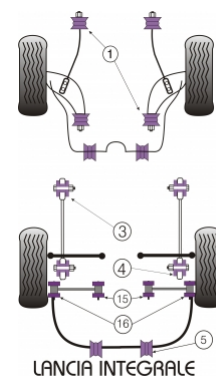

### Notes

- The Integrale EVO 2 uses PFF 30301 with a 14mm bore bush
- All other Integrale use PFF 30302 with 12mm bore bush





### PRODUCT PRICING INFORMATION

The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

**Bush Price x Qty Per Car = Pack Price**

In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.

Bush description	Quantity Per Car	Diagram Reference	Part Number	Retail Price Each
 <b>Front Wishbone Bush</b>	4	1	<b>PFF 30301</b>	
 <b>Front Wishbone Bush</b>	4	1	<b>PFF 30302</b>	
 <b>Rear Tie Bar Front Bush</b>	2	3	<b>PFR 30307</b>	
 <b>Rear Tie Bar Rear Bush</b>	2	4	<b>PFR 30308</b>	



**Rear Anti Roll Bar Bush 15mm**


**2**

**5**

**PFR 3031015**



**PowerAlign Camber Bolt Kit (12mm)**

 [Click for fitting instructions](#)

**1**

**PFA 10012**



**Rear Lateral Arm Inner & Outer Bush**

**4**

**15, 16**

**PFR 30309**