


VAUXHALL / OPEL - VECTRA C (2002-2008)

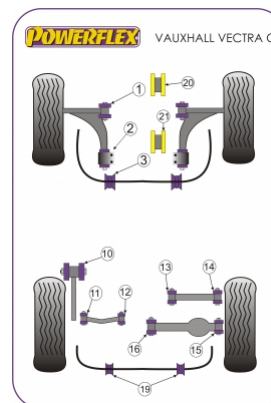

Notes:

- Two types of front anti roll bar bushes are used, PFF 66503-* replaces single piece design PFF 801203-* replaces the two piece design.
- PFF 801220 rear lower engine mount insert fits cars with a bracket 86mm wide, for cars with a 79mm wide bracket use PFF 801221.
- For diesel models use engine mount insert part number, PFF 801220R or PFF 801221R
- PFR 801211 Fits arms using a spherical type bush 47mm in diameter, for arms with a 38mm rubber bush use PFR 801217



PRODUCT PRICING INFORMATION

The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

Bush Price x Qty Per Car = Pack Price

In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.

Bush description	Quantity Per Car	Diagram Reference	Part Number	Retail Price Each
 Front Lower Wishbone Front Bush Click for fitting instructions	2	1	PFF 801201	
 Front Lower Wishbone Rear Bush Click for fitting instructions	2	2	PFF 801202	

	Front Anti Roll Bar Mounting Bush 24mm	2	3	PFF 6650324
	Front Anti Roll Bar Mounting Bush 25mm	2	3	PFF 6650325
	Front Anti Roll Bar Mounting Bush 24mm (2 Piece)	2	3	PFF 80120324
	Front Anti Roll Bar Mounting Bush 25mm (2 Piece)	2	3	PFF 80120325
	PowerAlign Camber Bolt Kit (12mm) Click for fitting instructions	1		PFA 10012
	Rear Trailing Arm Front Bush Click for fitting instructions	2	10	PFR 801210
	Rear Upper Arm Outer Bush Click for fitting instructions	2	11	PFR 801211
	Rear Upper Arm Outer Bush, 38mm	2	11	PFR 801217
	Rear Upper Arm Inner Bush Click for fitting instructions	2	12	PFR 801212
	Rear Toe Arm Inner Bush	2	13	PFR 801213
	Rear Toe Arm Outer Bush	2	14	PFR 801214
	Rear Lower Arm Outer Bush Click for fitting instructions	2	15	PFR 801215
	Rear Lower Arm Inner Bush Click for fitting instructions	2	16	PFR 801216
	Rear Anti Roll Bar Mounting Bush 16mm	2	19	PFR 6651916
	Rear Anti Roll Bar Mounting Bush 17mm	2	19	PFR 6651917
	Rear Anti Roll Bar Mounting Bush 18mm	2	19	PFR 6651918
	Rear Anti Roll Bar Mounting Bush 19mm	2	19	PFR 6651919
	Universal Exhaust Mount Click for fitting instructions	1		EXH 016
	Front Lower Engine Mount Insert	1	20	PFF 801220
	Front Lower Engine Mount Insert (Diesel)	1	20	PFF 801220R
	Rear Lower Engine Mount Insert	1	21	PFF 801220
	Rear Lower Engine Mount Insert (Diesel)	1	21	PFF 801220R



Rear Lower Engine Mount Insert (79mm Option)

1

21

PFF 801221



Rear Lower Engine Mount Insert Diesel (79mm Option)

1

21

PFF 801221R