


## SAAB - 900 (1983-1993)

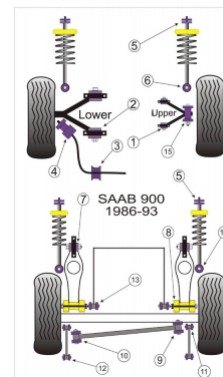






### PRODUCT PRICING INFORMATION















The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

**Bush Price x Qty Per Car = Pack Price**

In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.

Bush description	Quantity Per Car	Diagram Reference	Part Number	Retail Price Each
 <b>Front Wishbone Upper Arm Bush</b>	<b>4</b>	<b>1</b>	<b>PFF 66401</b>	
 <b>Front Wishbone Lower Bush</b>	<b>4</b>	<b>2</b>	<b>PFF 66402</b>	
 <b>Front Anti Roll Bar Mounting</b>	<b>2</b>	<b>3</b>	<b>PFF 66403</b>	
 <b>Front Anti Roll Bar To Wishbone Bush</b>	<b>2</b>	<b>4</b>	<b>PFF 66404</b>	
 <b>Shock Top Mounting</b>	<b>4</b>	<b>5</b>	<b>PFF 66405</b>	

	<b>Front Lower Shock Mounting</b>	<b>2</b>	<b>6</b>	<b>PFF 66425</b>
	<b>Rear Wishbone Front Mounting Bush</b>	<b>2</b>	<b>7</b>	<b>PFR 66410</b>
	<b>Rear Beam To Wishbone Bush</b>	<b>2</b>	<b>8</b>	<b>PFR 66415</b>
	<b>Rear Axle Side To Side Location Axle Bush</b>	<b>1</b>	<b>9</b>	<b>PFR 66416</b>
	<b>Rear Axle Side To Side Location Body Bush</b>	<b>1</b>	<b>10</b>	<b>PFR 66417</b>
	<b>Rear Axle To Chassis Bush Front</b>	<b>2</b>	<b>11</b>	<b>PFR 66419</b>
	<b>Rear Axle To Chassis Bush Rear</b>	<b>2</b>	<b>12</b>	<b>PFR 66418</b>
	<b>Rear Anti Roll Bar Outer Bush</b>	<b>2</b>	<b>13</b>	<b>PFR 66421</b>
	<b>Rear Lower Shock Mounting</b>	<b>2</b>	<b>14</b>	<b>PFR 66420</b>
	<b>Front Wishbone Upper Outer Bush</b>	<b>2</b>	<b>15</b>	<b>PFF 66422</b>
	<b>Steering Rack Mounting</b>	<b>2</b>		<b>PFF 66430</b>
	<b>Alternator Adjuster Arm Bush</b>	<b>1</b>		<b>PFF 66431</b>
	<b>Alternator Mounting Bracket Bush</b>	<b>1</b>		<b>PFF 66432</b>
	<b>Power Steering Mounting Bush</b>	<b>1</b>		<b>PFF 66433</b>