


## SAAB - 9000 (1985-1998)

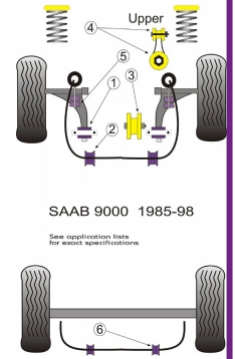

### Notes:

- PFF 66120 fits cars upto 1993 fitted with a manual gearbox.
- PFF 66121 fits cars from 1994 with a manual gearbox, also cars fitted with an automatic gearbox 1985 to 1998.




### PRODUCT PRICING INFORMATION

The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

**Bush Price x Qty Per Car = Pack Price**

In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.

Bush description	Quantity Per Car	Diagram Reference	Part Number	Retail Price Each
 <b>Front Wishbone Rear Bush</b>	2	1	<b>PFF 66101</b>	
 <b>Front Anti Roll Bar Bush 18mm</b>	2	2	<b>PFF 6610218</b>	
 <b>Front Anti Roll Bar Bush 19mm</b>	2	2	<b>PFF 6610219</b>	

	<b>Gearbox Mounting up to 94 only</b>	<b>1</b>	<b>3</b>	<b>PFF 66120</b>
	<b>Gearbox Mounting Manual 94 on, All Years Auto</b>	<b>1</b>	<b>3</b>	<b>PFF 66121</b>
	<b>Upper Engine Mounting Kit</b>	<b>1</b>	<b>4</b>	<b>PFF 66125</b>
	<b>Front Anti Roll Bar Drop Link Bush</b>	<b>2</b>	<b>5</b>	<b>PFF 66105</b>
	<b>Rear Anti Roll Bar Bush 18mm</b>	<b>2</b>	<b>6</b>	<b>PFR 6610718</b>
	<b>Rear Anti Roll Bar Bush 19mm</b>	<b>2</b>	<b>6</b>	<b>PFR 6630419</b>
	<b>PowerAlign Camber Bolt Kit (12mm)</b> <a href="#">Click for fitting instructions</a>	<b>1</b>		<b>PFA 10012</b>